


POWER2GRID

User Manual Hybrid Inverter

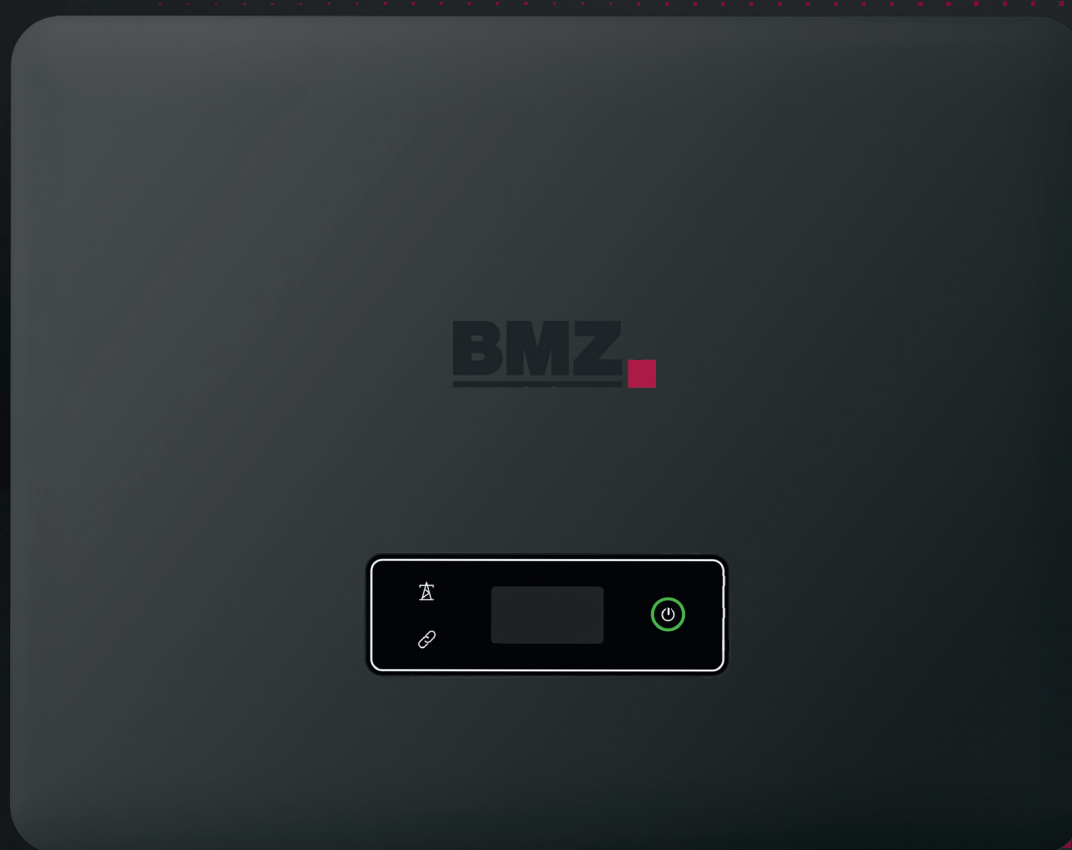

E-Mobility



Drive
System



Energy Storage
Systems



Power- and
Garden Tools



Industrial



Medical

1	About This Manual.....	5
	1.1 How To Use This Manual.....	5
	1.2 Target Groups.....	5
	1.3 Symbols.....	5
2	Safety Instructions.....	6
	2.1 Safety Notes.....	6
	2.2 Statement.....	6
3	Product Description.....	7
	3.1 System Introduction.....	7
	3.2 Product Introduction.....	8
	3.3 Symbols On the Inverter.....	9
	3.4 Operation Modes.....	10
	3.5 Back-Up and Off-Grid Output.....	12
	3.6 Unpacking and Storage.....	13
4	Installation.....	14
	4.1 Location.....	14
	4.2 Mounting the Inverter.....	15
5	Electrical Connection.....	17
	5.1 Electrical Wiring Diagram.....	18
	5.2 AC Connection.....	20
	5.3 Monitoring Device Installation.....	22
	5.4 Meter and CT Connection.....	23
	5.5 Communication Connection.....	24
	5.6 PV String Connection.....	31
	5.7 Power Cable of the Battery Connection.....	34
6	Commissioning.....	36
	6.1 App Preparation.....	36
	6.2 Inspection Before Commissioning.....	36
	6.3 Commissioning Procedure.....	36
	6.4 Stop the Inverter.....	37
7	Screen Operation.....	37
	7.1 Main Window.....	37
	7.2 General Setting.....	38
	7.3 Advanced Setting.....	39
	7.4 Customize Set.....	42
	7.5 Auto-Test.....	43
	7.6 Reactive Power.....	44
	7.7 Active Power.....	46
	7.8 Check Firmware Version.....	46
	7.9 Grid Parameter.....	46
	7.10 DI Ctrl.....	51
8	Monitoring.....	52
	8.1 Monitoring Device.....	52
	8.2 Cloud monitoring App.....	52
	8.3 Local configuration App.....	52
9	Troubleshooting.....	53
	9.1 Status Code in Waiting.....	53
	9.2 Error Message.....	53
	9.3 Inverter Maintenance.....	55
	9.4 Battery Maintenance.....	56
	9.5 Earh Fault Alarm.....	55
10	Appendix.....	57
	10.1 Technical Parameters.....	57
	10.2 Contact Information.....	62

1 About This Manual

This manual is an integral part of POWER2GRID 2504~4020 three-phase high-voltage hybrid inverters (hereinafter referred to as the inverter). It mainly introduces the assembly, installation, electrical connection, debugging, maintenance and troubleshooting of the products.

All or part of the products, services or features described in this document may not be within the scope of purchase. This document serves only as a guide to use, and all statements, information and recommendations in this document do not constitute any express or implied guarantee.

1.1 How To Use This Manual

Before installing and using inverters, please read this manual carefully, understand the safety information and be familiar with the functions and characteristics of inverters.

1.2 Target Groups

This manual is applicable to electrical installers with professional qualifications and end-users, who should have the following skills:

- ① Training for installation and commissioning of the electrical system, as well as dealing with hazards.
- ② Knowledge of the manual and other related documents.
- ③ Knowledge of the local regulations and directives.

1.3 Symbols

Important instructions contained in this manual should be followed during installation, operation and maintenance of the inverter. They will be highlighted by the following symbols.



Indicates a hazard with a high level of risk that, if not avoided, will result in death or serious injury.



Indicates a hazard with a medium level of risk that, if not avoided, could result in death or serious injury.



Indicates a hazard with a low level of risk that, if not avoided, could result in minor or moderate injury.



Indicates a situation that, if not avoided, could result in equipment or property damage, data loss, equipment performance degradation.



Indicates additional information, emphasized contents or tips that may be helpful, e.g., to help you solve problems or save time.

2 Safety Instructions

2.1 Safety Notes

- ① Before installation, please read this manual carefully and follow the instructions in this manual strictly.
- ② Installers need to undergo professional training or obtain electrical related professional qualification certificates.
- ③ When installing, do not open the front cover of the inverter. Apart from performing work at the wiring terminal (as instructed in this manual), touching or changing components without authorization may cause injury to people, damage to inverters and annulment of the warranty.
- ④ All electrical installations must conform to local electrical safety standards.
- ⑤ If the inverter needs maintenance, please contact the local designated personnel for system installation and maintenance.
- ⑥ To use this inverter for power generation needs the permission of the local power supply authority.
- ⑦ The temperature of some parts of the inverter may exceed 60° C during operation. To avoid being burnt do not touch the inverter during operation. Let it cool before touching it.
- ⑧ When exposed to sunlight, the PV array generates dangerous high DC voltage. Please operate according to our instructions, or it will result in danger to life.
- ⑨ When wiring the lithium battery terminals, please disconnect the breaker or switch of the lithium battery in case of a physical injury caused by the high voltage.

2.2 Statement

BMZ Germany GmbH has the right not to undertake quality assurance in any of the following circumstances:

- ① Damages caused by improper transportation.
- ② Damages caused by incorrect storage, installation or use.
- ③ Damages caused by installation and use of equipment by non-professionals or untrained personnel.
- ④ Damages caused by failure to comply with the instructions and safety warnings in this document.
- ⑤ Damages of running in an environment that does not meet the requirements stated in this document.
- ⑥ Damages caused by operation beyond the parameters specified in applicable technical specifications.
- ⑦ Damages caused by unauthorized disassembly, alteration of products or modification of software codes.
- ⑧ Damages caused by abnormal natural environment (force majeure, such as lightning, earthquake, fire, storm, etc.).
- ⑨ Any damages caused by the process of installation and operation which don't follow the local standards and regulations.
- ⑩ Products beyond the warranty period.

3 Product Description

3.1 System Introduction

The hybrid solar system is usually composed of the PV array, hybrid inverter, lithium battery, loads and power grid.

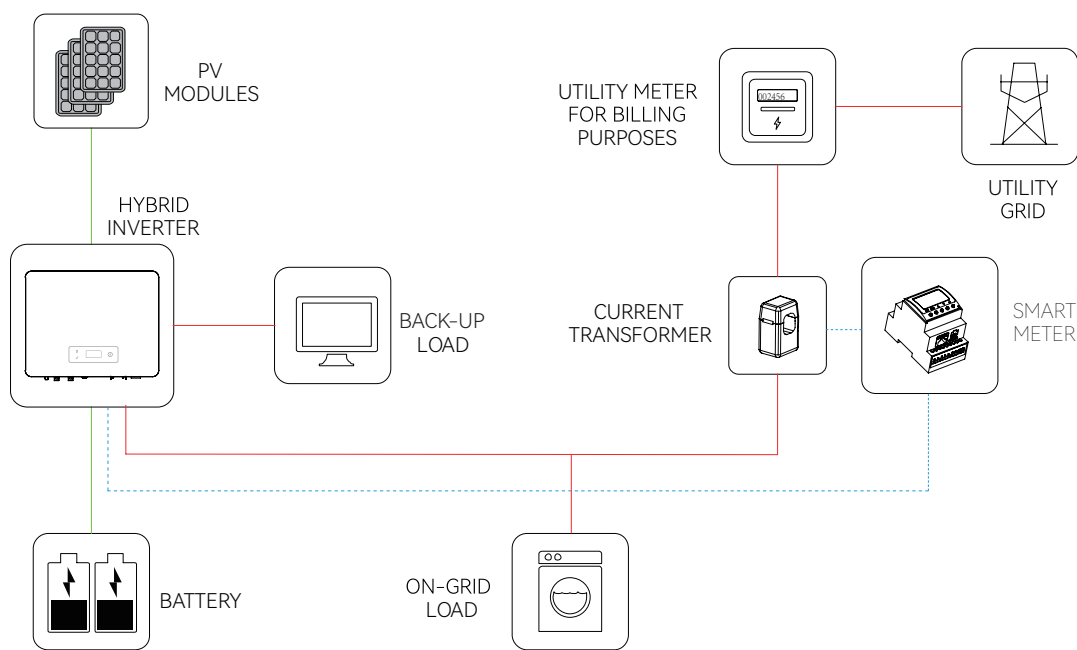


Figure 3-1 Schematic diagram of hybrid system



The system is not suitable for supplying life-sustaining medical devices. It cannot guarantee backup power in all circumstances.

The applicable grid types for the BMZ POWER2GRID 2504~4020 series are TN-S, TN-C, TN-C-S and TT. When applied to the TT grid, the voltage of N to PE suggests less than 30V.

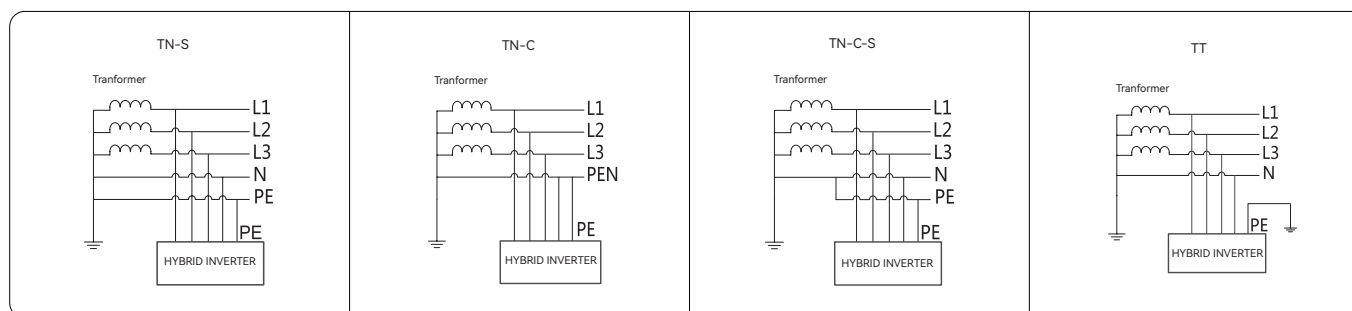


Figure 3-2 Applicable grid types

3.2 Product Introduction

The BMZ POWER2GRID 2504~4020 series inverter is also known as hybrid inverter or storage inverter, which is mainly used to combine the PV array, lithium battery, loads and power grid to realize intelligent power management and dispatching.

▼ 3.2.1 Models

The POWER2GRID 2504~4020 series hybrid inverter includes 10 models which are listed below:
POWER2GRID 2504, POWER2GRID 2505, POWER2GRID 2506, POWER2GRID 2508, POWER2GRID 2510, POWER2GRID 2512, POWER2GRID 4010, POWER2GRID 4012, POWER2GRID 4015, POWER2GRID 4020.

▼ 3.2.2 Appearance

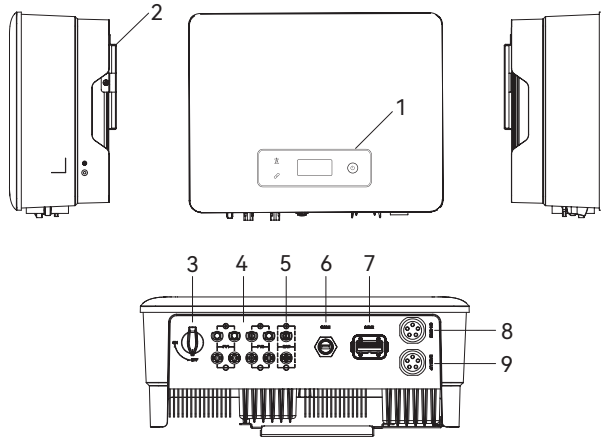


Figure 3-3 Inverter Appearance

Wiring terminals are at the bottom of the inverter, as shown in the table below.

Item	Terminal	Note
1	Display and LED panel	Display the operation information and working status of the inverter.
2	Hanger	Used to hang the inverter on the wall-mounting bracket.
3	DC switch	Used to safely disconnect the DC circuit.
4	DC input terminal	PV connector
5	Battery input terminal	Battery connector
6	COM1 port	WiFi/LAN/4G module connector
7	COM2 port	Multi-function Connector (Meter/BMS/RS485/DRED)
8	On-grid output terminal	Used for On-grid output cable connection
9	Back-up output terminal	Used for Back-up output cable connection

▼ 3.2.3 Indicator

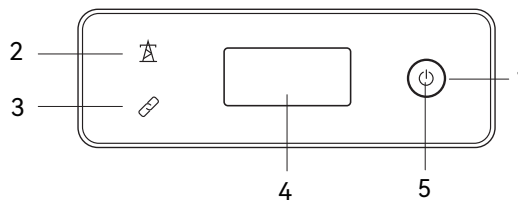









Figure 3-4 Inverter display interface

Item	Indicator	Status		Description
1	Power and Alarm Indicator	Off		No power.
		Green	Quick flashing	Inverter entered self-test status.
			Slow flashing	Inverter entered waiting status.
			Breathe flashing	Inverter works normal.
		Orange	Breathe flashing	Low battery warning, the battery power is about to reach the SOC protection value.
		Red	Always on	An alarm or fault is detected, view the fault info on the display.
2	Grid Indicator	Off		Grid lost.
		Slow flashing		Inverter detected grid but not running in on-grid mode.
		Always on		Inverter works in on-grid mode.
3	Communication Indicator	Green	Always on	The inverter communication is running normally.
		Green	Flashing	The inverter communicates with EMS or Master inverter through RS485 or CAN.
		Orange	Always on	The inverter isn't communicating with BMZ smart meter.
		Red	Always on	The inverter isn't communicating with the BMS.
4	Display	Display off to save power, press the button to wake up the display.		
5	Button	Switch display information and set parameters by short press or long press.		

3.3 Symbols On the Inverter

Symbol	Description
	To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end-users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately
	Please read the instructions carefully before installation.
	Do not touch any internal parts of the inverter within 10 minutes of disconnecting the power, battery and PV input.
	CE mark, the inverter complies with the requirements of the applicable CE guidelines.
	Danger. Risk of electric shock!
	The surface is hot during operation and do not touch.
	Additional grounding point.

3.4 Operation Modes

BMZ Hybrid inverter has the following basic Operation Modes:


General Mode, Economic Mode, UPS Mode, Peak Shifting, Feed-in Mode, Off-grid Mode, ToU Mode. Users can set the operation mode through the inverter display menu, Monitoring web and Monitoring App.

In General Mode, Economic Mode, Peak Shifting, Feed-in Mode, UPS Mode and ToU Mode, when the power grid fails, the inverter will automatically switch to Off-grid Mode provided that On/Off-grid switch is turned on, supplying power to Back-up side loads without changing operation mode.

General Mode	Economic Mode
<p>In this operation mode, when the PV power is sufficient, it will be dispatched in the following sequence: loads first, the battery second, and the grid last. (You can set the export power to the grid to 0W when the local grid doesn't allow inverter power to feed to the grid). PV→Loads→Battery→Grid</p>	<p>In this working mode, you can set charge/discharge power and time in the App, inverter will use the power from PV or grid (whether to use can be set in the App) to charge the battery in the predetermined period.</p>
<p>When the PV power is insufficient, the battery will discharge to supply loads, and the grid will join in if the battery is not enough to supply loads (or the battery reaches the End SOC). PV+Battery(+Grid)→ Loads</p>	<p>Inverter will use power from PV and battery to supply loads in the predetermined period and the insufficient part will be supplied by the grid.</p>
UPS Mode	Peak Shifting
<p>In this operation mode, the inverter will use power from the PV and the grid to charge the battery until it is fully charged, and any excess power will supply the loads. The battery will not discharge as long as the grid is available. PV(+Grid)→Battery</p>	<p>EXPmax(kVA): Expected Max. import power from the utility grid. PV generation supply priority: PV powers load, battery and utility grid sequentially.</p>
<p>EXPmax(kVA): Expected Max. import power from the utility grid. Load consumption priority: PV, utility grid(EXPmax) and battery sequentially. Battery will be charged if there is surplus power from PV and/or utility grid.</p>	<p>EXPmax(kVA): Expected Max. import power from the utility grid. Load consumption priority: PV, utility grid(EXPmax) and battery sequentially. Battery will be charged if there is surplus power from PV and/or utility grid.</p>




To realize the "Peak Shifting" function, the load power that exceeded Pmax has to be within the inverter max output power, otherwise, the inverter will only output the max power which allowed.

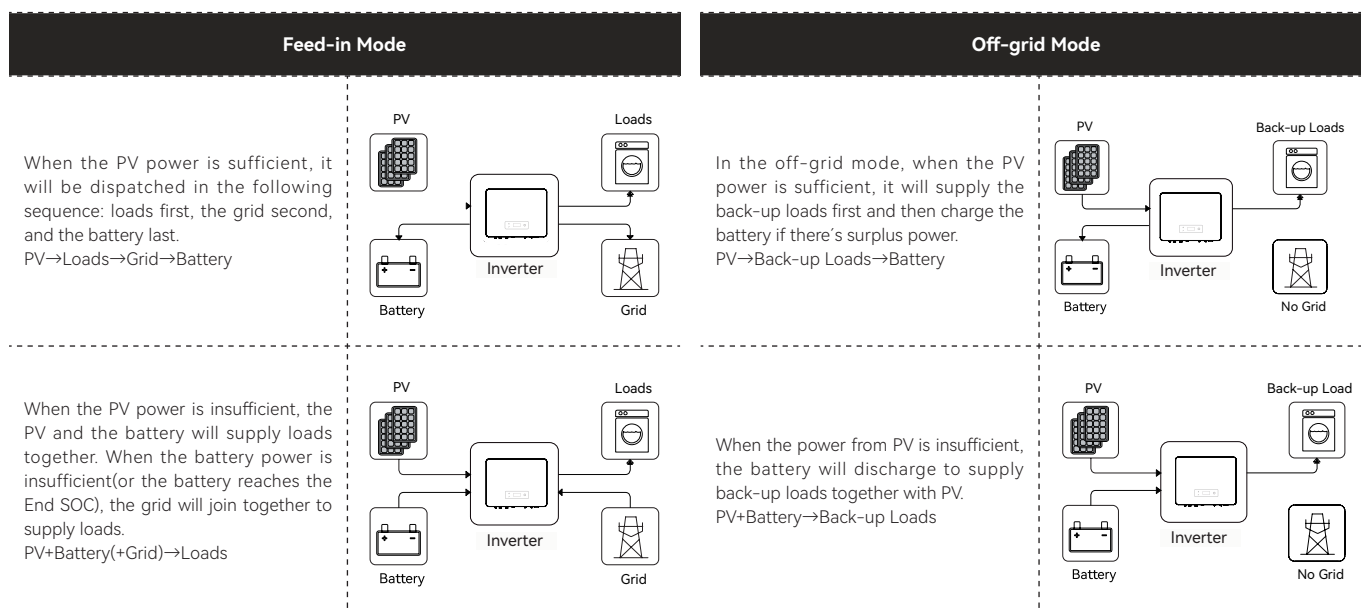

Off-grid Mode

Users can set different Operation Modes within a time group. The modes available for setting within a Time of Use (ToU) time group include General Mode, Battery Charge, PV Charging, Peak Shifting, Feed-in Mode, and Battery Discharge.

Among these, General Mode, Peak Shifting, and Feed-in Mode are consistent with the aforementioned working logic

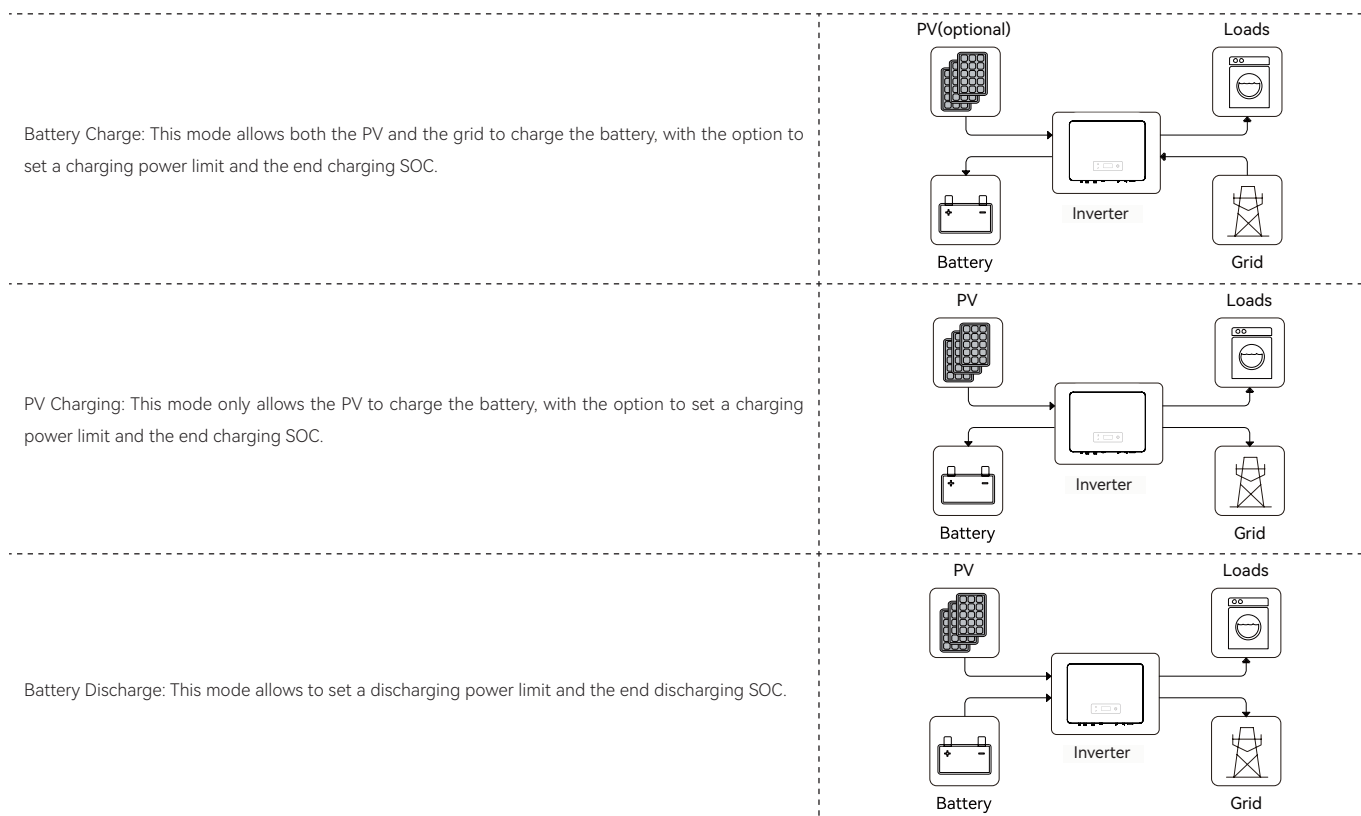

3.5 Back-Up and Off-Grid Output



It cannot be used as a substitute for a conventional UPS.

Normally, the Back-Up switching time is less than 10ms. However, some external factors may cause the system to fail on switching to Back-Up mode. Therefore, the conditions for using the Back-Up function smoothly are as follows for your awareness.

- ① Do not connect loads that are dependent on a stable energy supply for a reliable operation.
- ② Do not connect the loads whose total capacity is greater than the maximum Back-Up capacity.
- ③ Do not connect the loads that may cause very high start-up current surges, such as non-frequency conversion air conditioning, vacuum cleaner or half-wave loads such as hair dryer, heat gun, hammer drill.
- ④ Due to the condition of the battery itself, battery current might be limited by some factors, including but not limited to the temperature and weather.

BMZ POWER2GRID 2504~4020 hybrid inverter overloading ability in off-grid work mode describes as follows:

Off-grid Overloading Ability Illustration					
Status	Mode	Phase 1	Phase 2	Phase 3	Duration
Off-grid	Balance Output Mode	1.1times	1.1times	1.1times	Continuous
		2times	2times	2times	60s
	Unbalance Output Mode	1.25times*	1.25times*	1.25times*	Continuous

The multiples above are calculated based on rated output power.

POWER2GRID 4020 instantaneous max output power is 25kW.

*Only one of the three phases can reach up to 1.25times, and the other two phases should be less than 1.1times.

The inverter will restart in case of overload protection. The time required for restarting will increase (5 min at most) if overload protection repeats. Try to reduce Back-Up load power within maximum limitation or remove the loads which may cause very high start-up current surges.

3.6 Unpacking and Storage

The device is thoroughly tested and strictly inspected before delivery. Nonetheless, damage may still occur during shipping. For this reason, please conduct a thorough inspection after receiving the device.

Contact BMZ or the transport company in case of any damage or incompleteness, and provide photos to facilitate services.

▼ 3.6.1 Packing List

The package of the inverter includes the following accessories. Please check whether the accessories in the packing box are complete when receiving the goods.

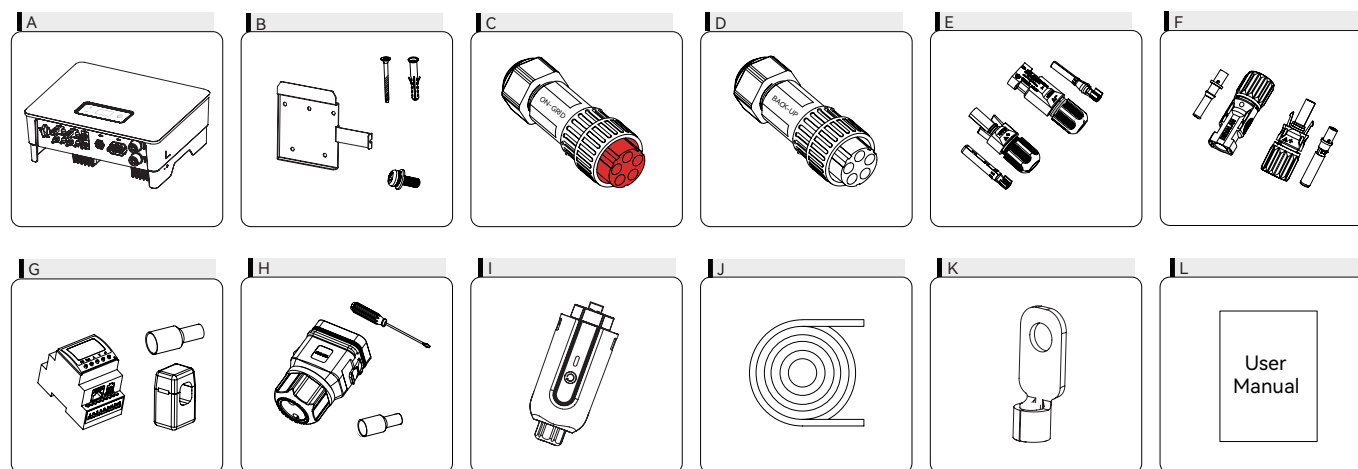


Figure 3-5 Packing list

Item	Name and Quantity	Note
A	Inverter (1pcs)	
B	Wall-mounting bracket (1pcs), Expansion plug set (5pcs), M5 screws (1pcs)	
C	On-grid connector set (1pcs)	Red
D	Back-up connector set (1pcs)	Black
E	PV terminal (POWER2GRID 2504-2510 2 pairs / POWER2GRID 4010-4020 4 pairs)	Black,U-profile pin
F	Battery terminal (Enclosure:1 pair, Metal core:POWER2GRID 2504-2510 1 pair / POWER2GRID 4010-4020 2 pairs)	Blue,O-profile pin
G	Meter with 3 CTs (1pcs)	
H	COM2 connector set (1pcs)	
I	Monitoring Device (1pcs)	
J	10m meter communication cable (1pcs), 3m battery communication cable (1pcs)	
K	PE terminal(1pcs)	
L	User guide	

▼ 3.6.2 Inverter Storage

① Do not dispose of the original packing case. It is recommended to store the device in the original packing case when the device is decommissioned.

② The storage temperature and humidity should be in the range of -30°C and $+60^{\circ}\text{C}$, and less than 90%, respectively.

③ If a batch of inverters needs to be stored, the height of each pile should be no more than 6 levels.

4 Installation

4.1 Location

The BMZ POWER2GRID 2504~4020 series inverters are designed with IP65 protection enclosure for indoor and outdoor installations. When selecting an inverter Installation Location, the following factors should be considered:

- ① The wall on which the inverters mounted must be able to withstand the weight of the inverter.
- ② The inverter needs to be installed in a well-ventilated environment.
- ③ Do not expose the inverter directly to strong sunlight to prevent excessive temperature operation. The inverter should be installed in a place with shelter to prevent direct exposure to sunlight and rain.
- ④ Install the inverter at eye level for easy inspection of screen data and further maintenance.
- ⑤ The ambient temperature of the inverter Installation Location should be between -30°C and 60°C .
- ⑥ The surface temperature of the inverter may reach up to 75°C . To avoid risk of burns, do not touch the inverter while it's operating and inverter must be installed out of reaching of children.

▼ 4.1.1 Installation Location

Select an optimal mounting Location for safe operation, long service life and expected performance.

- ① The inverter with protection rating IP65 can be installed both indoors and outdoors.
- ② Install the inverter at a place convenient for Electrical Connection, operation, and maintenance.

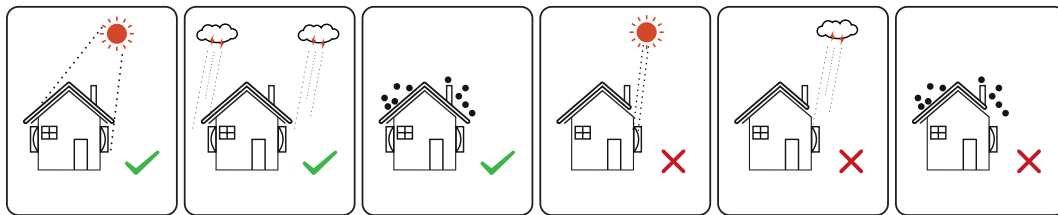


Figure 4-1 Recommended Installation Location



Do not put flammable and explosive articles around the inverter.

▼ 4.1.2 Installation Spacing

Reserve enough clearance around the inverter to ensure sufficient space for heat dissipation.

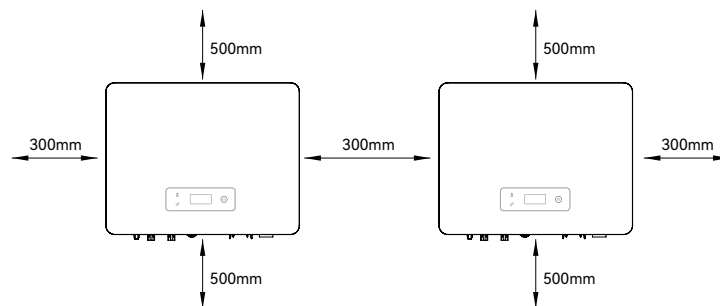


Figure 4-2 Recommended Installation spacing

▼ 4.1.3 Installation Angle

Install the inverter vertically. Never install the inverter horizontally, or at forward/backward tilted, or upside down.

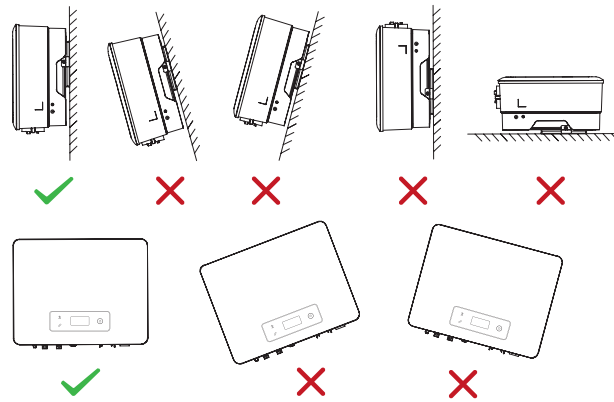


Figure 4-3 Permitted and prohibited mounting positions

4.2 Mounting the Inverter

▼ 4.2.1 Wall Bracket Installation

Dimensions of wall bracket (mm)

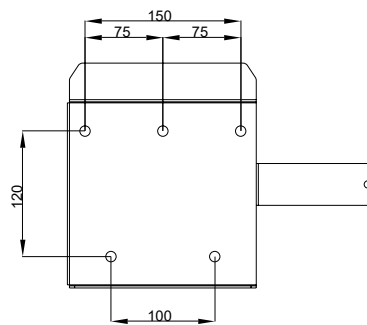


Figure 4-4 Dimensions of wall bracket

- ① Use the wall bracket as the template to mark the position of 5 holes on the wall.

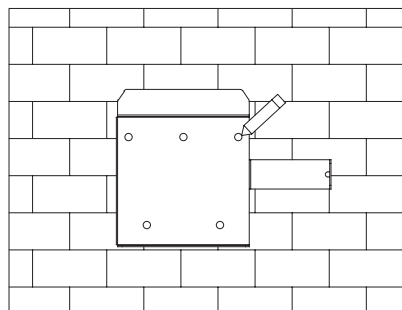


Figure 4-5 Marking hole position using Installation bracket

- ② Use an electrical driller with 10mm diameter bit to drill 5 holes in the wall with 80mm depth.



Before drilling, make sure to avoid any buried water tube and electric wires in the wall.

③ Insert the expansion tubes into the holes and tighten them, then fix the bracket onto the wall with expansion screws by using a cross screwdriver.

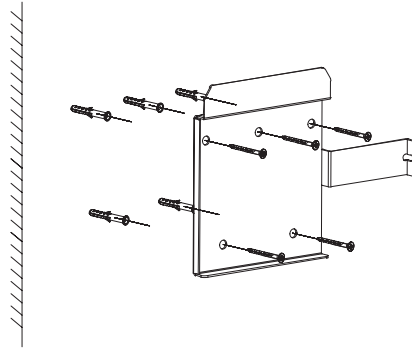


Figure 4-6 Fixing the wall bracket

▼ 4.2.2 Mounting the Inverter

Lift the inverter, hang the back rail on the fixed wall bracket carefully. Secure the inverter with M5 screws.

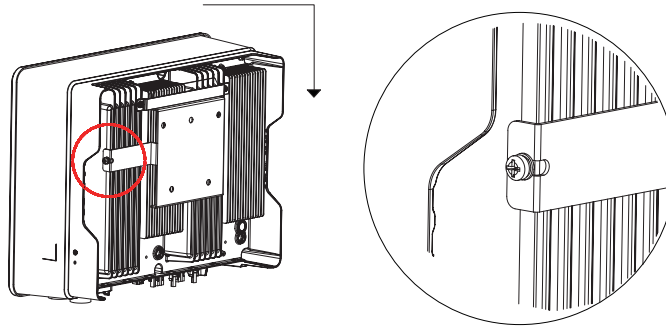


Figure 4-7 Mounting the Inverter

▼ 4.2.3 External Ground Connection

Connect the inverter and ground bar through PE wire to achieve the purpose of grounding protection. Please always remember wiring the PE wire before wiring other wires.



Do not connect the N-wire as a protective ground wire to the inverter casing. Otherwise, it may cause electric shock.



Reliable grounding is good for resisting surge voltage shock and improving EMI performance. Inverters must be well-grounded.
For a system with only one inverter, just ground the PE cable.
For a multi-inverter system, all inverters PE wire need to be connected to the same grounding copper bar to ensure equipotential bonding.



According to French UTE C15-712-1 standards, the ground of the inverter shall be connected to the equipotential bond by a conductor (PE wire) with a minimum cross-section of 6 mm² Cu or equivalent, and to the protective conductor of the a.c. part.

Ground terminal connection steps:

- ① The external grounding terminal is located at the lower right side of the inverter.
- ② Fix the grounding terminal to the PE wire with a proper tool and lock the grounding terminal to the grounding hole in the lower right side of the inverter.

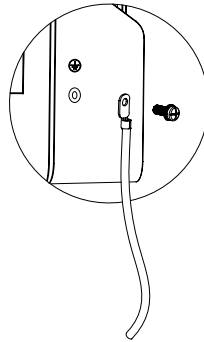


Figure 4-8 Grounding terminal connection

5 Electrical Connection



DANGER

A high voltage in the conductive part of the inverter may cause an electric shock. When installing the inverter, make sure that the AC and DC sides of the inverter are completely de-energized.



DANGER

Do not connect the N-wire as a protective ground wire to the inverter casing. Otherwise, it may cause electric shock.



WARNING

Do not ground the positive or negative pole of the PV string, otherwise it will cause serious damage to the inverter.



WARNING

The inverter is not suitable for functional grounded PV arrays as mentioned in the AS/NZS 5033 standard.



WARNING

Static may cause damage to the electronic components of the inverter. Anti-static measures should be taken during Installation and maintenance.



NOTICE

Do not use other brands or other types of terminals other than the terminals in the accessory package. BMZ has the right to refuse all damages caused by the mixed-use of terminals.



NOTICE

Moisture and dust can damage the inverter, ensure the cable gland is securely tightened during Installation. The warranty claim will be invalidated if the inverter is damaged as a result of a poorly connected cable connector.

5.1 Electrical Wiring Diagram

This diagram shows BMZ POWER2GRID 2504~4020 series hybrid inverter wiring structure and composition, concerning the real project, the Installation and wiring have to be in line with the local standards.

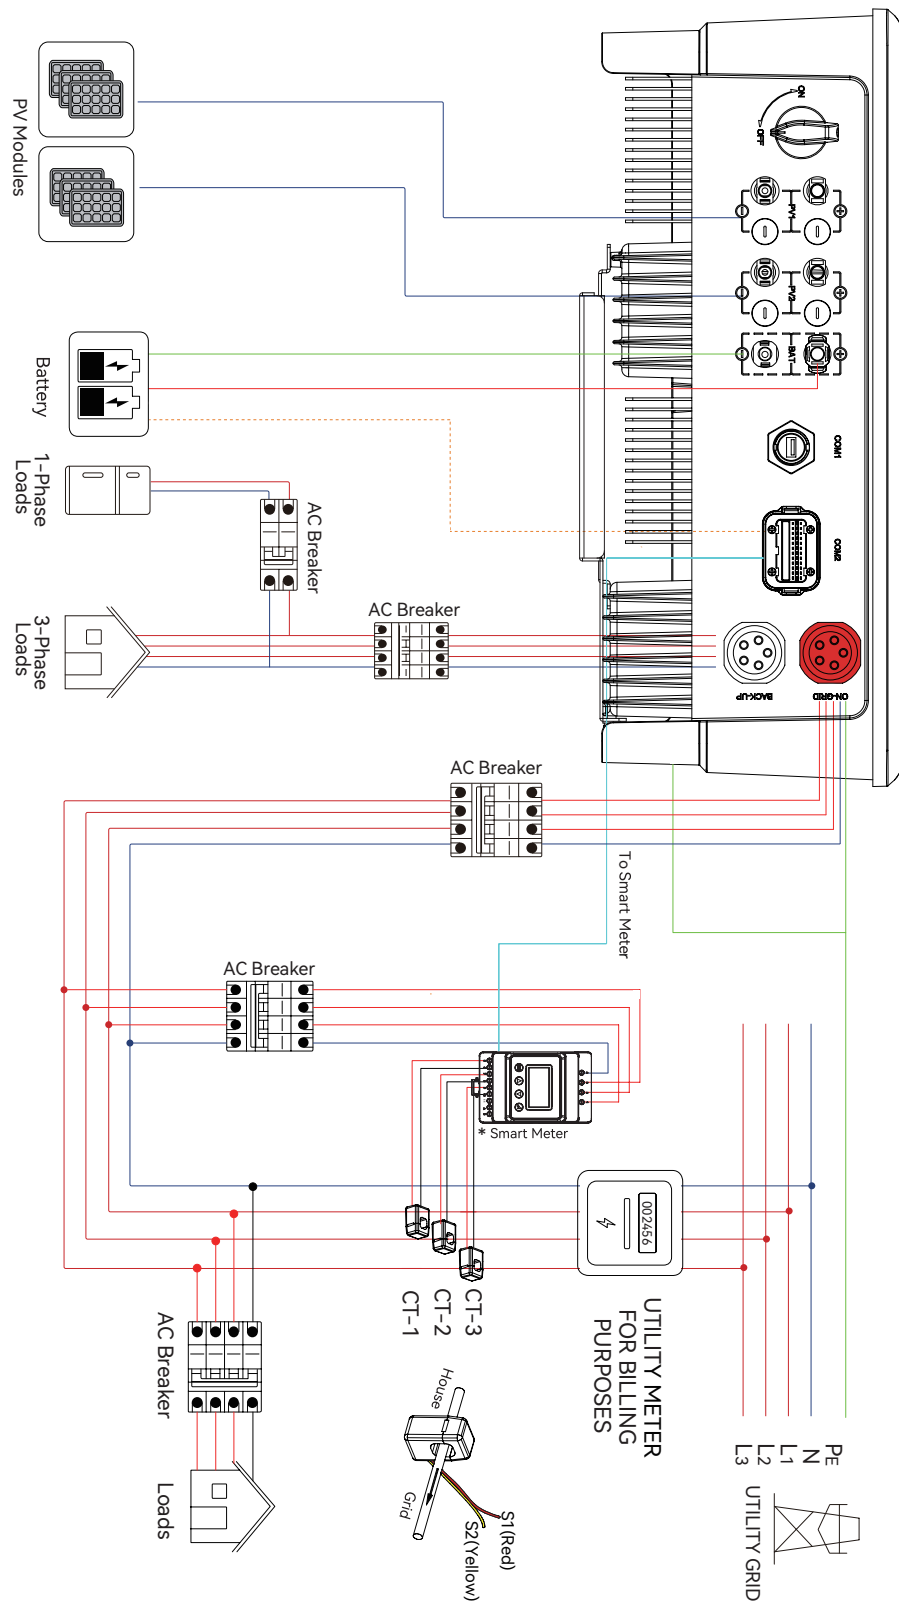


Figure 5-1 Electrical Wiring Diagram

Single inverter wiring diagram

This diagram is an example without special requirement on electrical wiring connection. Neutral line of AC supply can be isolated or switched.

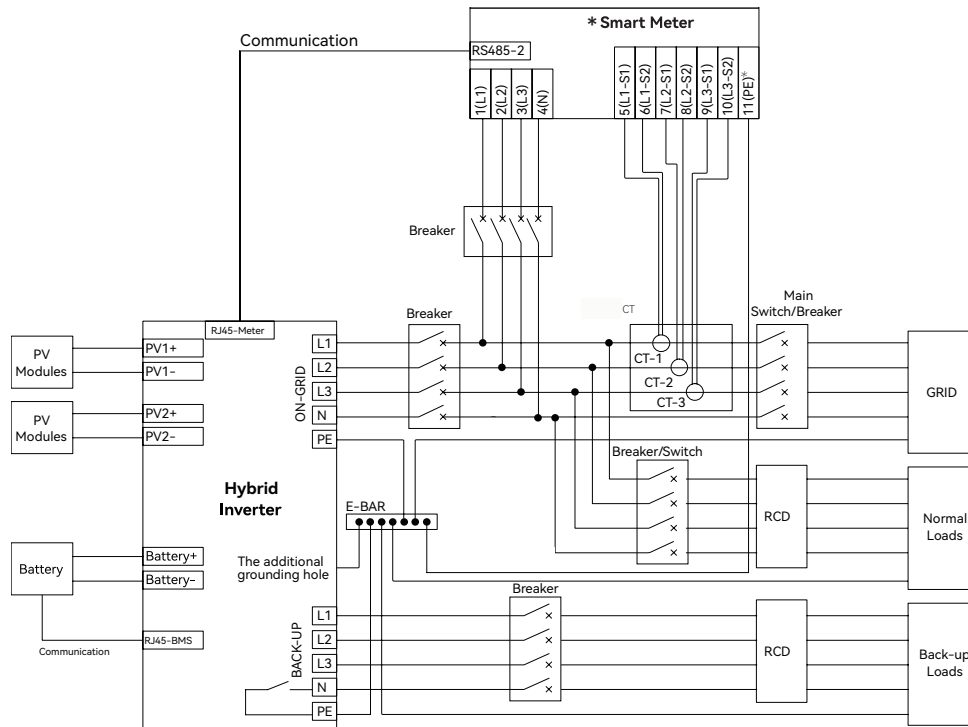


Figure 5-2 Standard wiring diagram

This diagram is an example for Australia and New Zealand. Neutral line of AC supply must not be isolated or switched, and the neutral line of GRID side and BACK-UP side must be connected together according to the wiring rules AS/NZS_3000. Otherwise, BACK-UP function will not work.

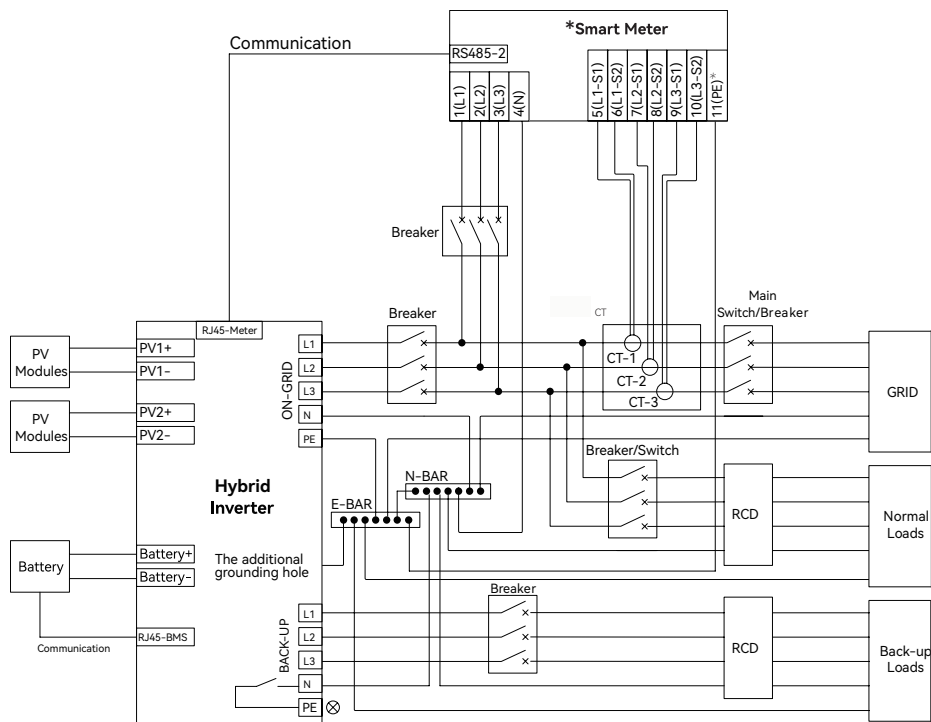


Figure 5-3 Australia wiring diagram

5.2 AC Connection

▼ 5.2.1 AC Side Requirements



- ① An independent AC breaker is required in both on-grid and back-up output side, and any loads cannot be connected with inverter directly.
- ② Before making the connection of AC cable, please confirm all DC & AC power source are disconnected from the inverter.
- ③ The BMZ POWER2GRID 2504~4020 series three-phase high voltage hybrid inverter applies to the three-phase power grid with a voltage of 230/400V and a frequency of 50/60Hz.
- ④ Connect the inverter to the grid only after getting an approval from the local electric power company.

A three-phase AC breaker needs to be installed on the AC side of the POWER2GRID 2504~4020. To ensure that the POWER2GRID 2504~4020 can safely disconnect itself from the power grid when an exception occurs, select a proper overcurrent protection device in compliance with local power distribution regulations and Max. input (output) current of POWER2GRID 2504~4020 AC side.

The allowable AC cable of wire diameter and cross-sectional area for BMZ POWER2GRID 2504~4020 are as shown in the following:

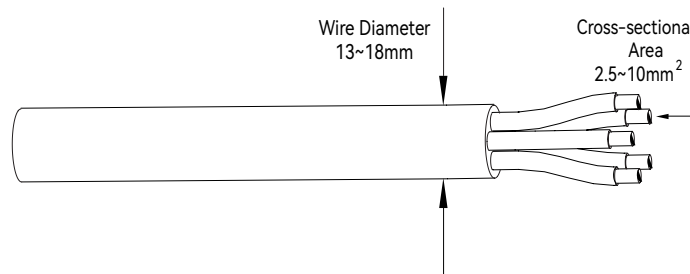


Figure 5-4



Determine whether an AC circuit breaker with greater overcurrent capacity is required based on actual conditions.

Residual Current Monitoring Device

With an integrated universal residual current Monitoring Device, the inverter will disconnect immediately from the mains once a fault current with a value exceeding the limit is detected.

However, if an external residual current device (RCD) is mandatory, the switch must be triggered at a residual current of 300 mA (type A is recommended), or it can be set to other values according to local regulations. For example, in Australia, the inverter can use an additional 30mA (type A) RCD in Installations.

▼ 5.2.2 Assembling the AC Connector

The AC terminal block is on the bottom side of the inverter.

- ① Take the AC connector out of the accessory bag and disassemble it.

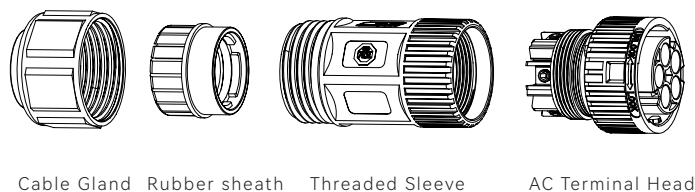


Figure 5-5

- ② According to the figure 5-4, select an appropriate cable, peel the insulation sleeve of AC cable off for 50mm, and peel off the end of 3L / PE / N wires for 8mm.

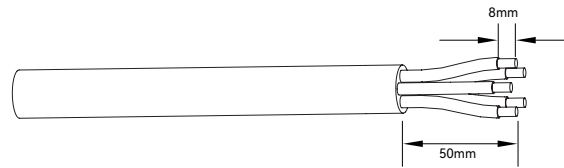


Figure 5-6

- ③ Insert the stripped end of the five wires into the appropriate hole of the terminal head. Please try to pull out the cable to make sure it is well connected.

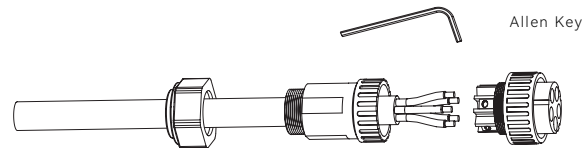


Figure 5-7



WARNING

The cord end terminals must be locked tightly, and make sure it won't be loose after a long period of use.

- ④ According to the arrow direction push the threaded sleeve to make it connected with the AC terminal head and then rotate the cable gland clockwise to lock it.

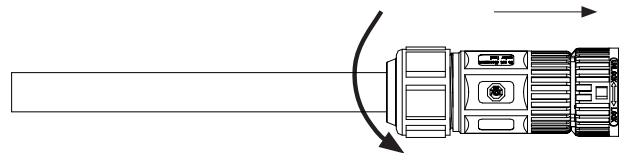


Figure 5-8

▼ 5.2.3 Installing the AC Connector



DANGER

High voltage may be present in inverter!
Ensure all cables are voltage-free before Electrical Connection.
Do not connect the AC circuit breaker until all inverter Electrical Connections are completed.

Connect the AC connector to the inverter AC terminal, and rotate the AC connector buckle clockwise until its tight enough.

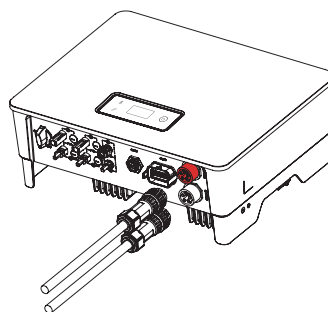


Figure 5-9




Please distinguish the on-grid and back-up port, and don't mix up the on-grid port and back-up port when making the connection.

▼ 5.2.4 Remove the AC connector



High voltage may be present in inverter!
Please disconnect the power supply before removing the AC connector.

Use a flathead screwdriver to align the clips on the AC connector and pull out the AC connector.

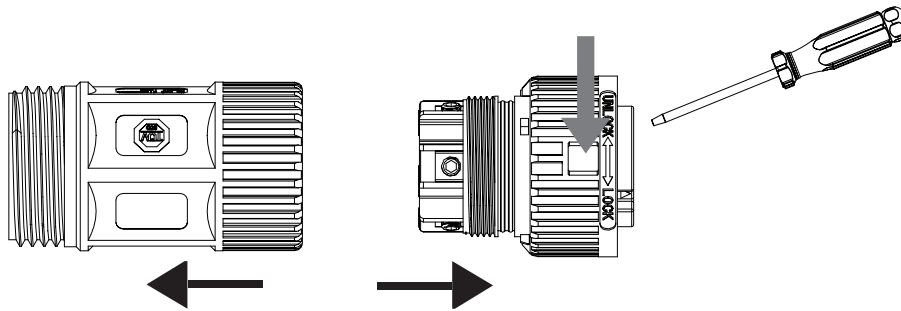

5.3 Monitoring Device Installation

BMZ POWER2GRID 2504~4020 series hybrid inverter supports WIFI, LAN, and 4G communication.

Plug the WIFI, LAN, or 4G module into the COM1 port in the bottom of inverter. A slight “click” sound during the Installation represents that the assembly is in place.

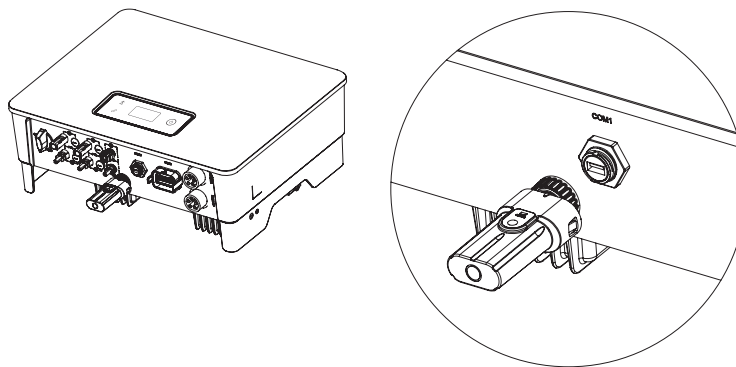


Figure 5-10 Monitoring Device Installation



Refer to “8 Monitoring” for more information.

5.4 Meter and CT Connection

The current Transformer, also called CT, is usually installed on the L wires between the house loads and the power grid. The Meter can be installed in the AC combiner box or other places that are unable to be touched by children. BMZ CT cable with length of 2m, it's fixed and can't be extended.

The CTs have been connected to the Smart Meter when you received them, and you just need to follow the wiring diagram in the Meter to connect CT.

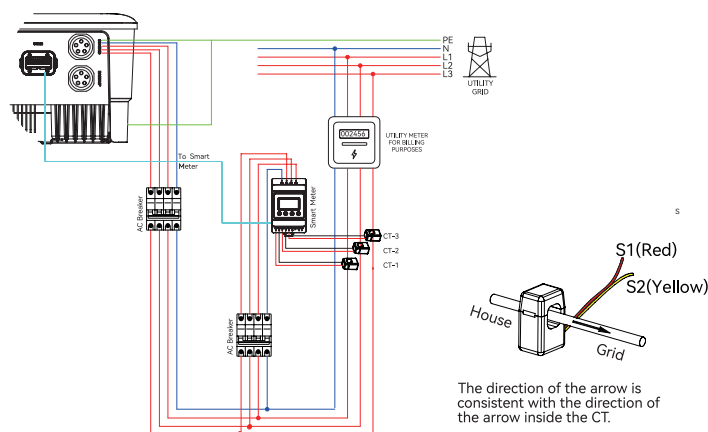


Figure 5-11



CT Installation direction should strictly follow the instruction in the user manual, otherwise, the inverter may not be working normally. The CT has to be corresponding with the port in the meter, and the connection between CT and Meter needs to be reliable, otherwise, the CT measurement accuracy may be affected.



Please choose the appropriate CT size according to your needs.

Meter terminals definition as shown in table below:

No.	Definition	Function
	SMART METER	
1	L1	L1/L2/L3/N connect to grid to detect power grid voltage
2	L2	
3	L3	
4	N	
5	L1-S1	To detect the CT current and direction
6	L1-S2	
7	L2-S1	
8	L2-S2	
9	L3-S1	
10	L3-S2	
11	PE	Ground connection
RS485	Reserve	Communicate with hybrid inverter
	RS485-2	
ANT	Reserve	
LAN	Reserve	
Type-C	Type-C	Specified Debug Interface. Do not use it by non-professionals

5.5 Communication Connection

All communication ports are in the multifunction communication Port at the bottom of inverter which including Meter port, CAN port, BMS port, EMS port, RLYOUT port, DRED port.

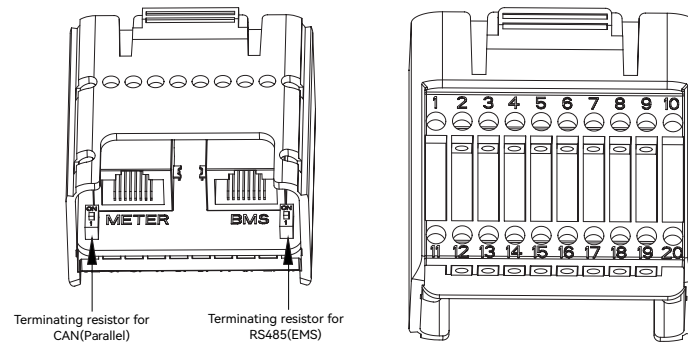


Figure 5-12

Pin	Definition	Function
METER (RJ45-1)	RS 485	Communicate with Meter
BMS (RJ45-1)	CAN	Communicate with BMS
1	/	/
2	/	/
3	/	/
4	/	/
5	DRM4/8	DRED For Australia and New Zealand RCR For Germany and some other European countries
6	DRM3/7	
7	DRM2/6	
8	DRM1/5	
15	COM D/0	Emergency stop
16	REF D/0	
11	Emergency stop +	Emergency stop
12	Emergency stop -	
13	485 B1	EMS
14	485 A1	
17	CANL_P	CAN for parallel connection of inverters
18	CANH_P	
19	RSVD2	Signal output (13.5V,100mA) RSVD2:Power+ RSVD1:Power-
20	RSVD1	

▼ 5.5.1 Assembling the Multi-com Connector

- ① Unscrew the swivel nut from the connector.

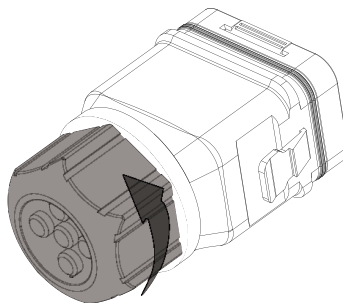


Figure 5-13

- ② Take out the terminal block.

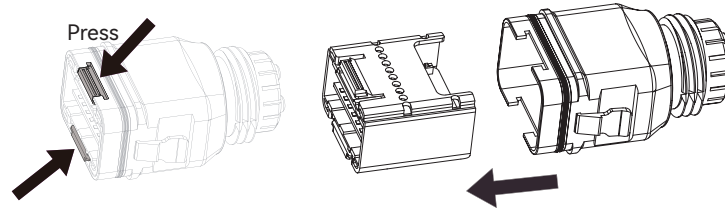


Figure 5-14

- ③ Remove the seal and lead the cable through the cable gland.

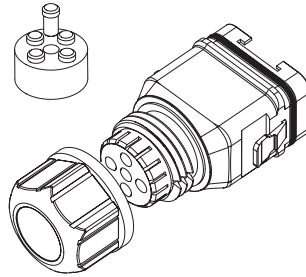


Figure 5-15

▼ 5.5.2 Connect the Meter And BMS Communication Cables



The communication between meter/BMS and inverter is RJ45 interface cable.

- ① Thread the RJ45 plug of appropriate length through the swivel nut, and insert it into the open side of the rubber gasket.

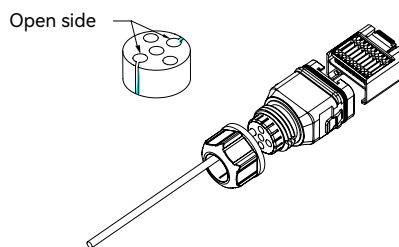


Figure 5-16

- ② Insert one side of the RJ45 plug into the RJ45 port of terminal block.

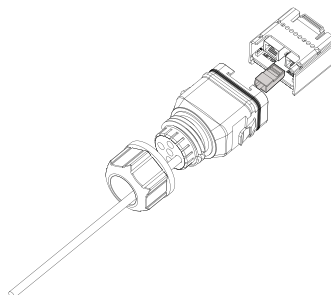


Figure 5-17

- ③ Insert another side of the communication cable into the meter RS485 port or BMS CAN port.

▼ 5.5.3 Connect Other Cables

① Thread the cable of appropriate length through the swivel nut and the housing. Remove the cable jacket and strip the wire insulation.

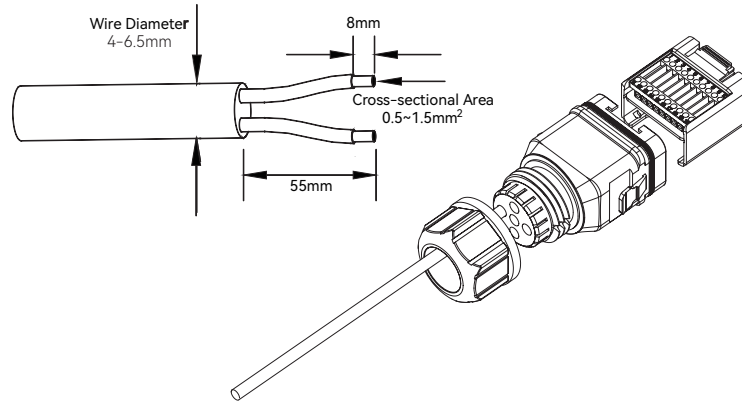


Figure 5-18

② (Optional) When using a multi-core multi-strand copper wire cable, connect the AC wire head to the cord end terminal (hand-tight). In case of single-strand copper wire, skip this step.

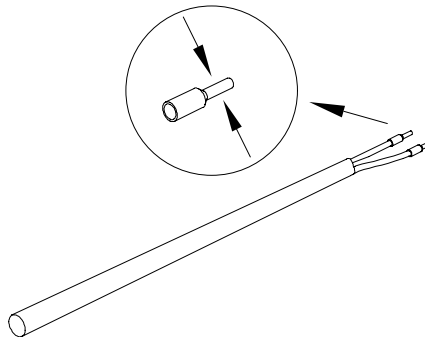


Figure 5-19

③ Fix all the wires to the terminal plug according to the assignment and tighten to a torque of $1.2 \pm 0.1 \text{ N} \cdot \text{m}$ with a screw-driver.step.

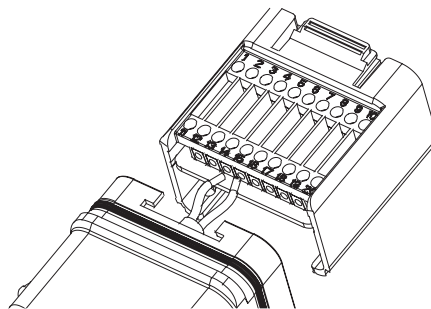


Figure 5-20

- ④ Pull the wires outward to check whether they are firmly installed.
Insert the terminal block into the connector until it snaps into place with an audible click.

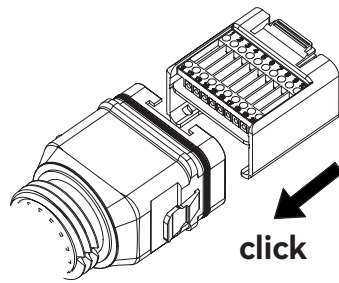


Figure 5-21

- ⑤ Fasten the swivel nut.

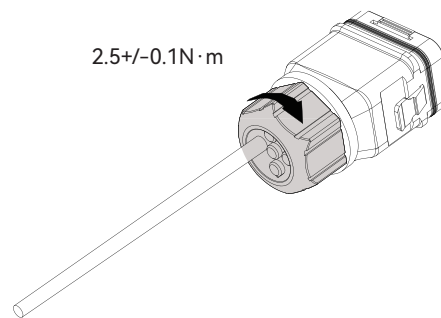


Figure 5-22

▼ 5.5.4 Installing the COM Connector

- ① Remove the waterproof lid from the COM terminal.
② Insert the COM connector into COM terminal on the bottom of the inverter until there is an audible click.

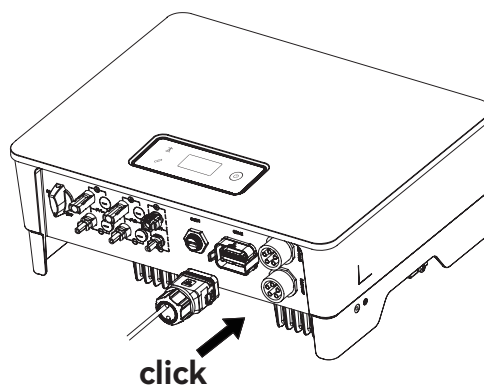


Figure 5-23

▼ 5.5.5 Meter and BMS Communication



Before purchasing the battery, you need to make sure the battery you selected is in the battery approval list of BMZ, otherwise, the system may not work properly. Please contact your installer or BMZ service team for confirmation if you're not sure about it.

RJ45 terminal connection sequence and definition as below:

	No.	Color	Meter Side	Battery Side
	1	Orange & White	/	RS485_A3
	2	Orange	/	RS485_B3
	3	Green & White	RS485_B2	/
	4	Blue	/	CANH_B
	5	Blue & White	/	CANL_B
	6	Green	RS485_A2	/
	7	Brown & White	RS485_B2	/
	8	Brown	RS485_A2	/

Figure 5-24 RJ45 terminal connection sequence and definition

▼ 5.5.6 EMS Communication

An EMS communication cable needs to be connected when to control the operation of a hybrid inverter through the EMS, and communication between EMS and inverter is RS485.

▼ 5.5.7 DI ctrl

DRM and Ripple Control support only one function at the same time.

DRM

DRED (Demand Response Enabling Device) interface is special reserved for Australia and New Zealand according to their safety regulation, and BMZ doesn't provide the DRED device for the customer. The inverter supports the demand response modes as specified in the standard AS/NZS 4777. The inverter has integrated a terminal block for connecting to a DRED.

DRED wiring diagram (hybrid inverter) as below:

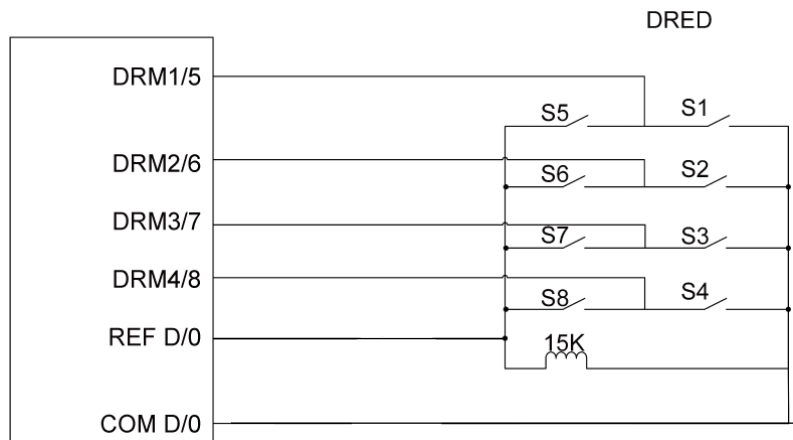


Figure 5-25

DRED mode as shown in table below:

Mode	Function
DRM 0	Operate the disconnection device
DRM 1	Do not consume power
DRM 2	Do not consume at more than 50% of rated power
DRM 3	Do not consume at more than 75% of rated power and source Reactive Power if capable
DRM 4	Increase power consumption (subject to constraints from other active DRMs)
DRM 5	Do not generate power
DRM 6	Do not generate at more than 50% of rated power
DRM 7	Do not generate at more than 75% of rated power and sink Reactive Power if capable.
DRM 8	Increase power generation (subject to constraints from other active DRMs)
Priority	DRM1 > DRM2 > DRM3 > DRM4
	DRM5 > DRM6 > DRM7 > DRM8



There is a resistor between 15(COM D/0) and 16(REF D/0), do not move the resistor while wiring.

RCR

RCR (Ripple Control Receiver) interface is special reserved for Germany and some other European country according to their safety regulation, and BMZ doesn't provide the RCR device for the customer.

In Germany and some European areas, a ripple control receiver is used to convert a power grid dispatching signal to a dry contact signal. The dry contact is required for receiving the power grid dispatching signal.

RCR wiring diagram (hybrid inverter) as below:


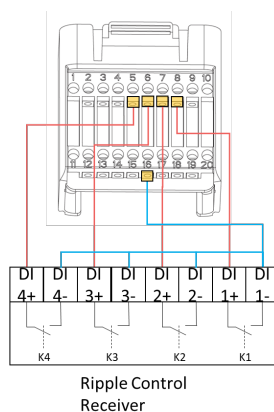


Figure 5-26


DRED mode as shown in table below:

Switch mode (External RCR device)	Feed-in output power (in % of the Rated AC output power)
K1 turn on	100%
K2 turn on	60%
K3 turn on	30%
K4 turn on	0%
RCR priority: K1<K2<K3<K4	


▼ 5.5.8 Parallel System

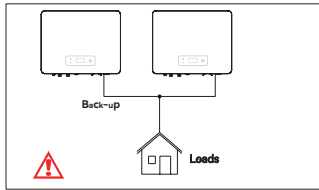


For the general version, back-up cannot connect in parallel. For advanced applications, please contact our after-sales department.

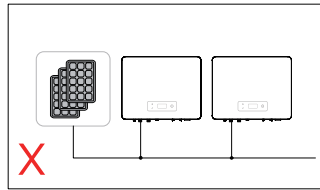


Single PV string cannot connect to multiple inverters.

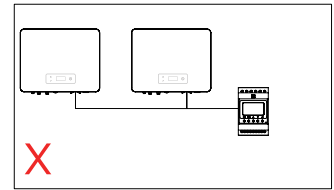


One meter cannot be connected to multiple inverters. Different CTs cannot connect to the same line cable.

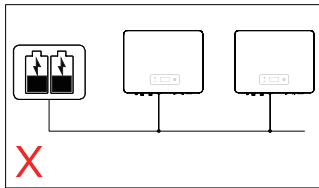

One battery bank cannot be connected to multiple inverters.

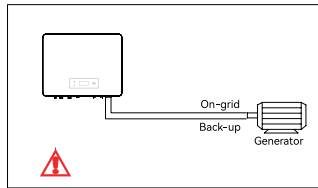

The on-grid and back-up side cannot be connected to and generator directly. For advanced applications, please contact our after-sales department.

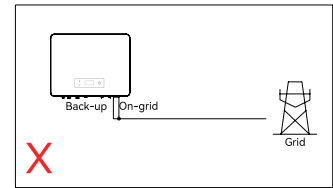

The back-up side cannot be connected on-grid side or grid.



For more Installation and setup information about parallel system, please contact BMZ.



Testing to AS/NZS 4777.2:2020 for multiple inverter combinations has not been conducted. Multiple inverter combinations should not be used.

▼ 5.5.9 Emergency stop

BMZ POWER2GRID 2504~4020 hybrid inverter comes standard with stop function, and you can use this function by connecting an external switch into the Emergency stop interface if it requires in the Installation place. The external switch doesn't include in our accessory box.

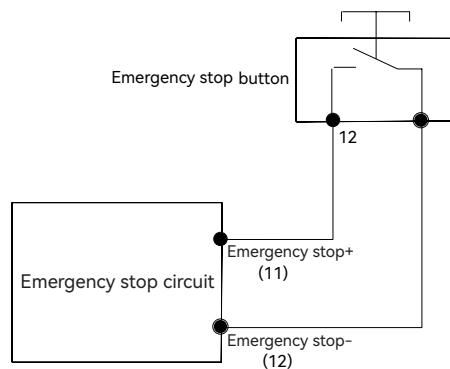


Figure 5-27 Emergency stop connection diagram

5.6 PV String Connection



High voltage may be present in the inverter!
Ensure all cables are voltage-free before performing electrical operations.
Do not connect the DC switch and AC circuit breaker before finishing Electrical Connection.



For best practice, ensure PV modules of the same model and specifications are connected in each string.



PV Max. Input voltage is 950V without battery, or 850V with battery, otherwise inverter will be waiting.

▼ 5.6.1 PV Side Requirements

System Layout of Units with external DC Switch

- ① Local standards or codes may require PV systems that fit with an external DC switch on the DC side. The DC switch must be able to safely disconnect the open-circuit voltage of the PV array plus a safety reserve of 20%. Install a DC switch to each PV string to isolate the DC side of the inverter.
- ② The DC switch has to be certified by AS 60947.3:2018 and AS/NZS IEC 60947.1:2020 in Australia and New Zealand market. The Max. current of the DC switch matching with POWER2GRID 2504~4020 inverter is no less than 40A. We recommend the following Electrical Connection.

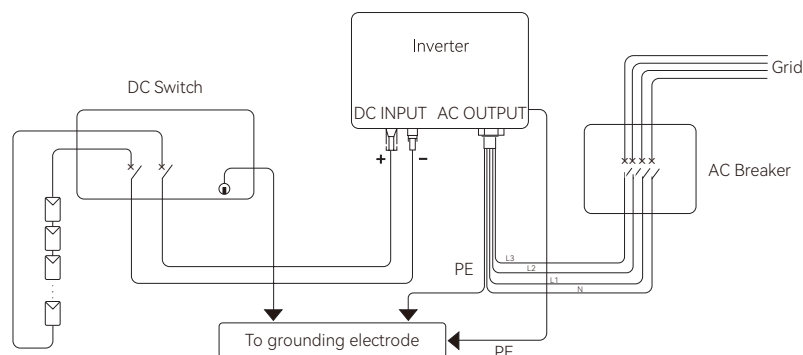


Figure 5-28

Select the appropriate photovoltaic cable

Cable requirements		Cable stripping length
Outside diameter	Conductor core section	
5.9-8.8 mm	4 mm ² (12AWG)	7 mm

▼ 5.6.2 Assembling the PV Connector



Before assembling the DC connector, make sure that the cable polarity is correct.



Please distinguish U-profile pin (PV terminal) and O-profile pin (Battery terminal). Recommended for crimping U-profile pin with "Phoenix CRIMPFOX-RC 10 - Indent Crimping pliers.

- ① Peel off the DC cable insulation sleeve for 7 mm.

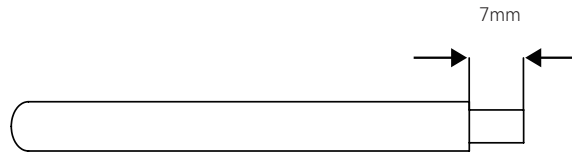


Figure 5-29

- ② Disassemble the connector in the accessory bag.

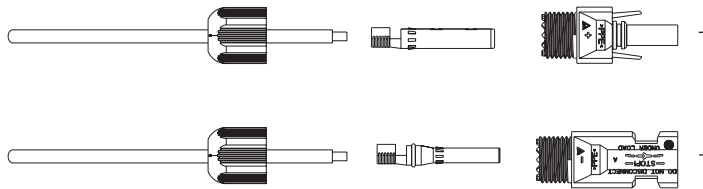


Figure 5-30

- ③ Insert the DC cable through the DC connector nut into the metal terminal and press the terminal with a professional crimping plier (pull back the cable with some power to check if the terminal is well connected to the cable).

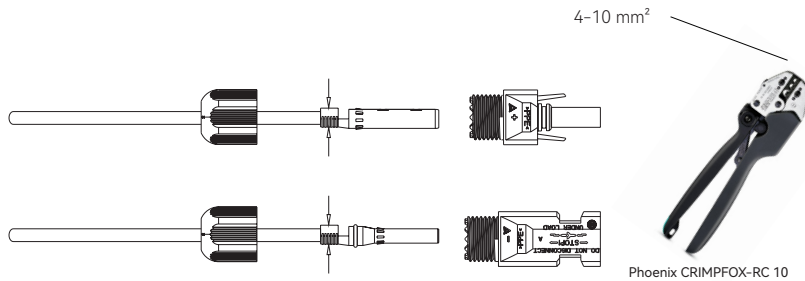


Figure 5-31

- ④ Insert the positive and negative cables into the corresponding positive and negative connectors, pull back the DC cable to ensure that the terminal is tightly attached in the connector.
- ⑤ Use an open-end wrench to screw the nut to the end to ensure that the terminal is well sealed.

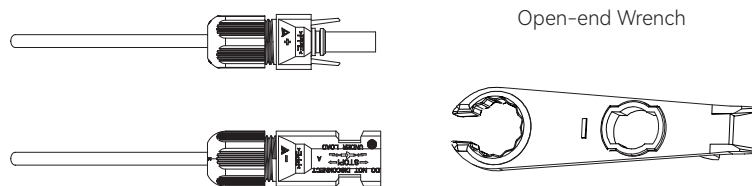


Figure 5-32

▼ 5.6.3 Installing the PV Connector

- ① Rotate the DC switch to "OFF" position.

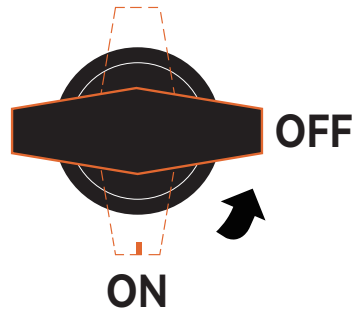


Figure 5-33

② Check the cable connection of the PV string for polarity correctness and ensure that the open circuit voltage in any case does not exceed the inverter input limit of 1,000V. PV Max. Input voltage is 950V without battery, or 850V with battery, otherwise inverter will be waiting.

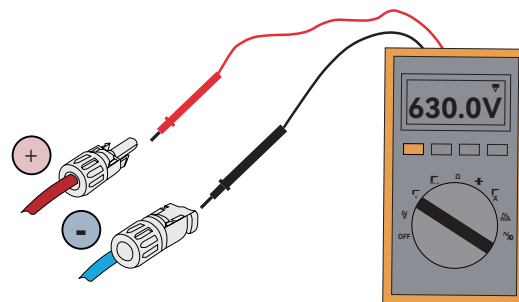


Figure 5-34

③ Insert the positive and negative connectors into the inverter DC input terminals respectively, a click sound should be heard if the terminals are well connected.


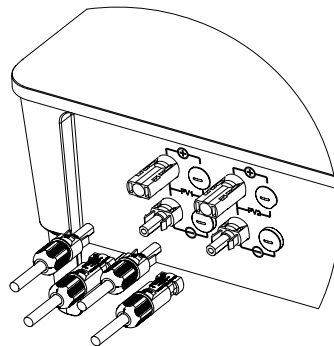


Figure 5-35

④ Seal the unused PV terminals with the terminal caps.

▼ 5.6.4 Remove the PV Connector

Please use the unlocking tool to remove the PV connector

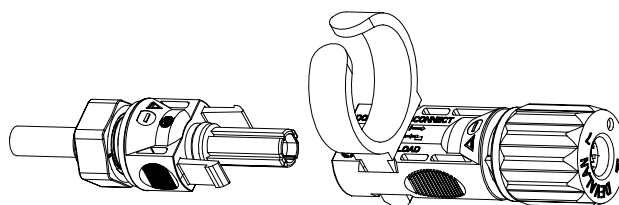

5.7 Power Cable of the Battery Connection



Please contact your battery supplier for detailed battery Installation information.

▼ 5.7.1 The following principles must be considered when making battery connection:

- ① Disconnect the AC breaker on the grid side.
- ② Disconnect the breaker on the battery side.
- ③ Turn the inverter DC switch to the "OFF" position.
- ④ Make sure the maximum input voltage of battery is within the inverter limitation.

▼ 5.7.2 Lithium battery connector assembly procedures

Select an appropriate DC cable

Cable requirements		Cable stripping length	Applicable models
Outside diameter	Conductor core section		
5.0-8.0 mm	6 mm ² (10AWG)	8 mm	POWER2GRID 2504-2510 POWER2GRID 4010-4020
	10 mm ² (8AWG)	10 mm	POWER2GRID 4010-4020



If the conductor core of the battery cable is too small, which may cause poor contact between the terminal and the cable, please use the cable specified in the above table, or contact BMZ to purchase terminals of other specifications.

- ① Peel off the battery cable insulation sleeve for 10 mm.



Figure 5-36

- ② Disassemble the connector in the accessory bag.



Please distinguish U-profile pin (PV terminal) and O-profile pin (Battery terminal). Recommended for crimping O-profile pin with "Phoenix CRIMPFOX 10S - Square Crimping pliers.

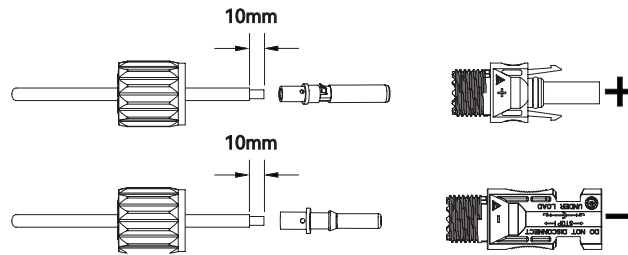


Figure 5-37

③ Insert the battery cable through the battery connector nut into the metal terminal and press the terminal with a professional crimping plier (pull back the cable with some power to check if the terminal is well connected to the cable).

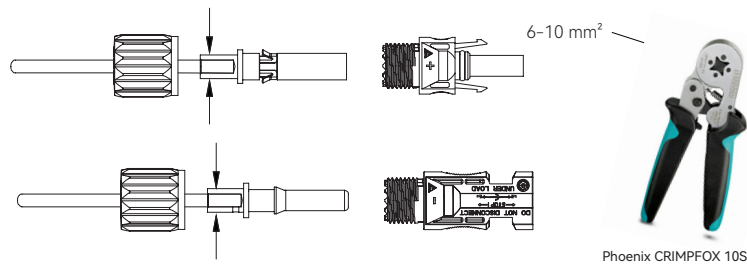


Figure 5-38

④ Insert the positive and negative cables into the corresponding positive and negative connectors, pull back the battery cable to ensure that the terminal is tightly attached in the connector.

⑤ Use an open-end wrench to screw the nut to the end to ensure that the terminal is well sealed.

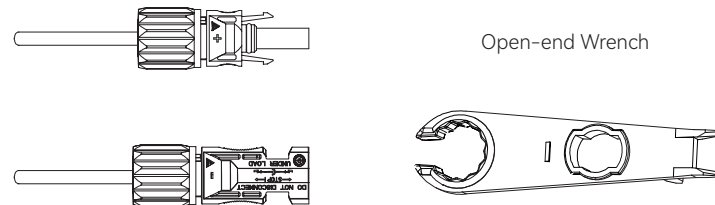


Figure 5-39



WARNING

- ① Before making the battery connector, please make sure the polarity of the cable is correct.
- ② Use a multimeter to measure the voltage of the battery pack and make sure the voltage is within the inverter limitation and the polarity is correct.

⑥ Insert the positive and negative connector into the inverter battery terminals respectively, and a “click” sound represents the assembly in place.

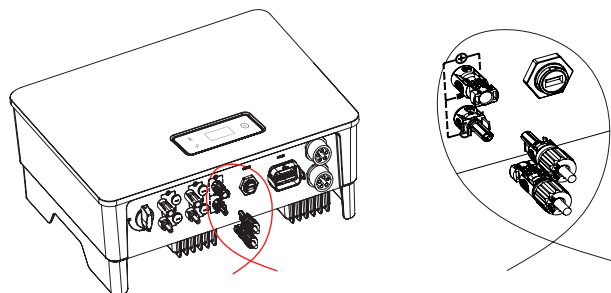


Figure 5-40

6 Commissioning

6.1 App Preparation

- ① Install the Local configuration App and Cloud monitoring App with latest version. Refer to “8.2 Cloud monitoring App and 8.3 Local configuration App”.
- ② Register an account on the Cloud monitoring App. If you have got the account and password from the distributor/installer or BMZ, skip this step.

6.2 Inspection Before Commissioning

Check the following Items before starting the inverter:

- ① All equipment has been reliably installed.
- ② DC switch and AC circuit breaker are in the “OFF” position.
- ③ The ground cable is properly and reliably connected.
- ④ The AC cable is properly and reliably connected.
- ⑤ The DC cable is properly and reliably connected.
- ⑥ The communication cable is properly and reliably connected.
- ⑦ The vacant terminals are sealed.
- ⑧ No foreign Items, such as tools, are left on the top of the machine or in the junction box (if there is).
- ⑨ The AC circuit breaker is selected in accordance with the requirements of this manual and local standards.
- ⑩ All warning signs & labels are intact and legible.

6.3 Commissioning Procedure

If all of the Items mentioned above meet the requirements, proceed as follows to start up the inverter for the first time.

- ① Turn on the AC breaker.
- ② Turn on the lithium battery switch. Power on the battery pack manually if a battery is equipped.
- ③ Turn on the DC switch, the DC switch may be integrated in the inverter or installed by the customer.
- ④ The inverter will work properly after turning on the DC and AC breakers on the condition the weather and grid meet requirements. The time for entering the operating mode may vary according to the chosen safety code.
- ⑤ Observe the LED Indicator to ensure that the inverter operates normally.
- ⑥ After the inverter is started, please refer to the [Quick Installation Guide] which is attached to the access to configure the inverter.



NOTE

If the inverter does not work properly, check the country code and battery ID Settings.

- ① Select the safety code suitable for the country (region) where the inverter is installed at.
- ② Select the battery ID suitable for the battery is installed.



NOTE

CT AUTO TEST FUNCTION

Hybrid inverter has the function of detecting the Installation direction and phase sequence of CT. The system is installed, this function can be enabled on the APP for detection.



NOTICE

SOC RESET FUNCTION

When the inverter is turned on for the first time, the battery will be automatically charged to calibrate the battery SOC. After the battery is charged, this function will be turned off automatically (If you confirm that it is not necessary, you can manually turn off the function. We recommend to enable this function.) If you need to calibrate the SOC during system use, you can manually enable the function to calibrate the battery SOC on app or inverter screen. After the battery is fully charged, the function is automatically disabled again.

6.4 Stop the Inverter

When turning off the inverter, please follow the steps below:

- ① Shut down the inverter through the APP or the button on the display first.
- ② Disconnect the breakers on the grid and load side.
- ③ Turn off the battery switch, and disconnect the DC breaker on the battery side (if any).
- ④ Wait 30 seconds and then turn the inverter DC switch to the “OFF” position. At this time, there is remaining power in the inverter capacitor. Wait for 10 minutes until the inverter is completely de-energized before operating.
- ⑤ If need to turn on the inverter after following above steps to Stop the Inverter, please turn on the AC breaker, battery breaker, battery switch and DC switch in turn, then the inverter will start.
- ⑥ If the inverter is not used for some time or never again, please disconnect the AC and DC cables. Please notice disconnection cables is only for disconnection and requires an electrician/trained approved personnel.

7 Operation


When the inverter is turned on, the following interfaces will be displayed on the OLED display, and the OLED display allows the user to check various operation information and to modify the settings of the inverter.



CT AUTO TEST FUNCTION

Hybrid inverter has the function of detecting the Installation direction and phase sequence of CT. The system is installed, this function can be enabled on the APP for detection.

7.1 Main Window

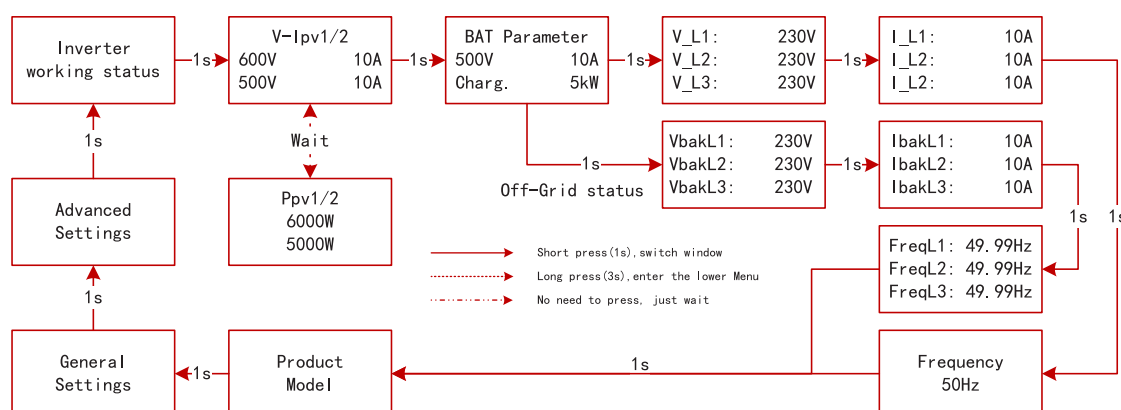


Inverter working status:
Waiting/Checking/On-Grid/Off-Grid/Fault Info/FW Updating

Inverter Display Abbreviation and Complete Name Reference Table:

Abbreviation	Complete Name
V-Ipv1/2	PV input voltage and current of each MPPT
Ppv1/2	PV input power of each MPPT
BAT Parameter	Battery Parameter
Charg.	Charge
Dischg.	Discharge
V_L1: / V_L2: / V_L3:	Three-phase AC voltage (On-Grid Status)
VbakL1: / VbakL2: / VbakL3:	Three-phase AC voltage (Off-Grid Status)
I_L1: / I_L2: / I_L3:	Inverter output current (On-Grid Status)
IbakL1: / IbakL2: / IbakL3:	Inverter output current (Off-Grid Status)
FreqL1: / FreqL2: / FreqL3:	Inverter output Frequency (Off-Grid Status)
FW Updating	Firmware Updating


7.2 General Setting

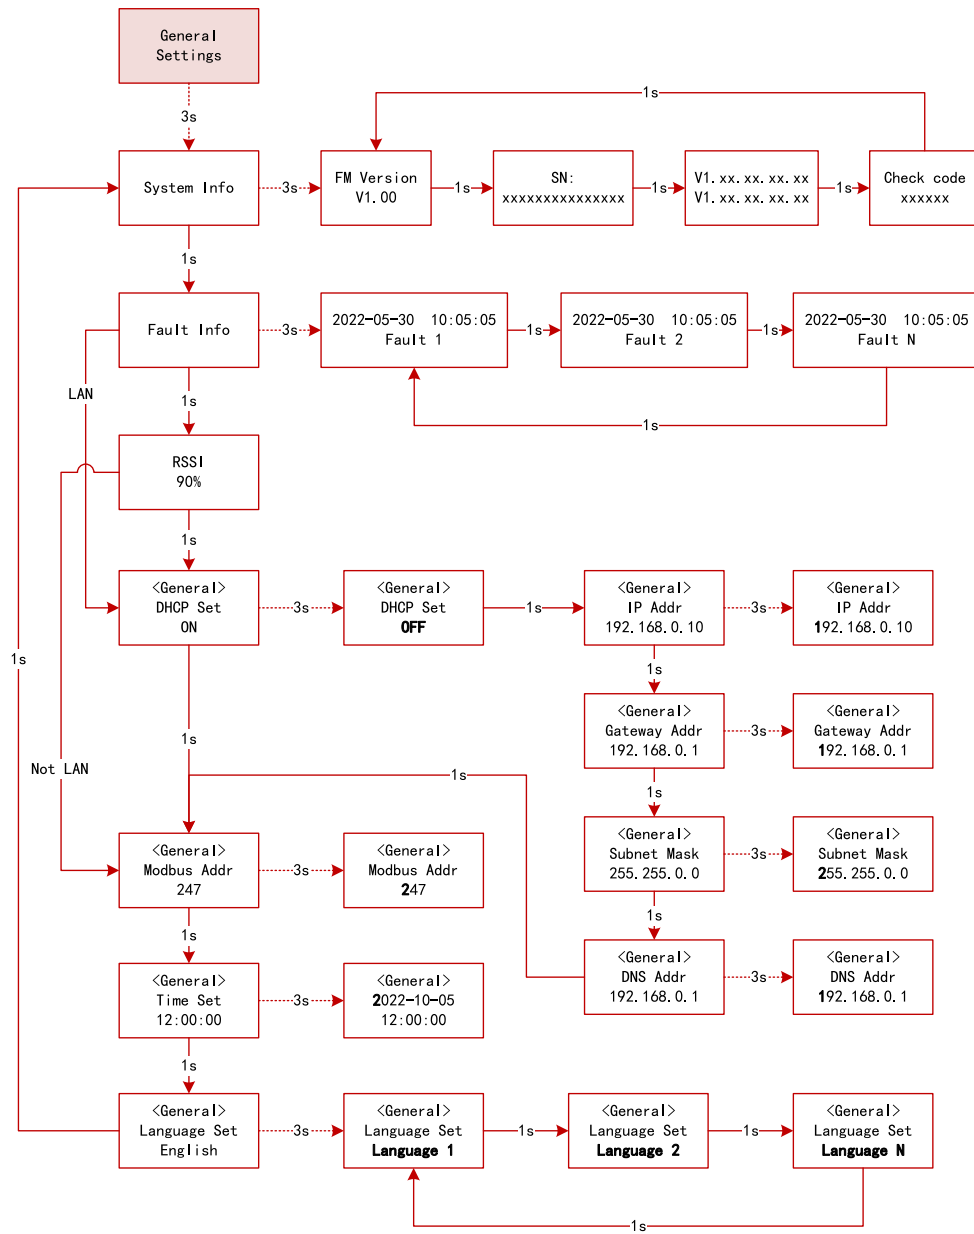


Inverter Display Abbreviation and Complete Name Reference Table:

Abbreviation	Complete Name
System Info	System information
FM Version	Firmware version
SN	Series number
Fault Info	Fault information
RSSI	Received signal strength Indicator
DHCP Set	Enable or disable DHCP functionality
IP Addr	If DHCP is turned off, set the static IP address
Gateway Addr	If DHCP is turned off, set the Gateway IP address
Subnet Mask	If DHCP is turned off, set the subnet mask
DNS Addr	If DHCP is turned off, set the domain name server address
Modbus Addr	Modbus address

7.3 Advanced Setting

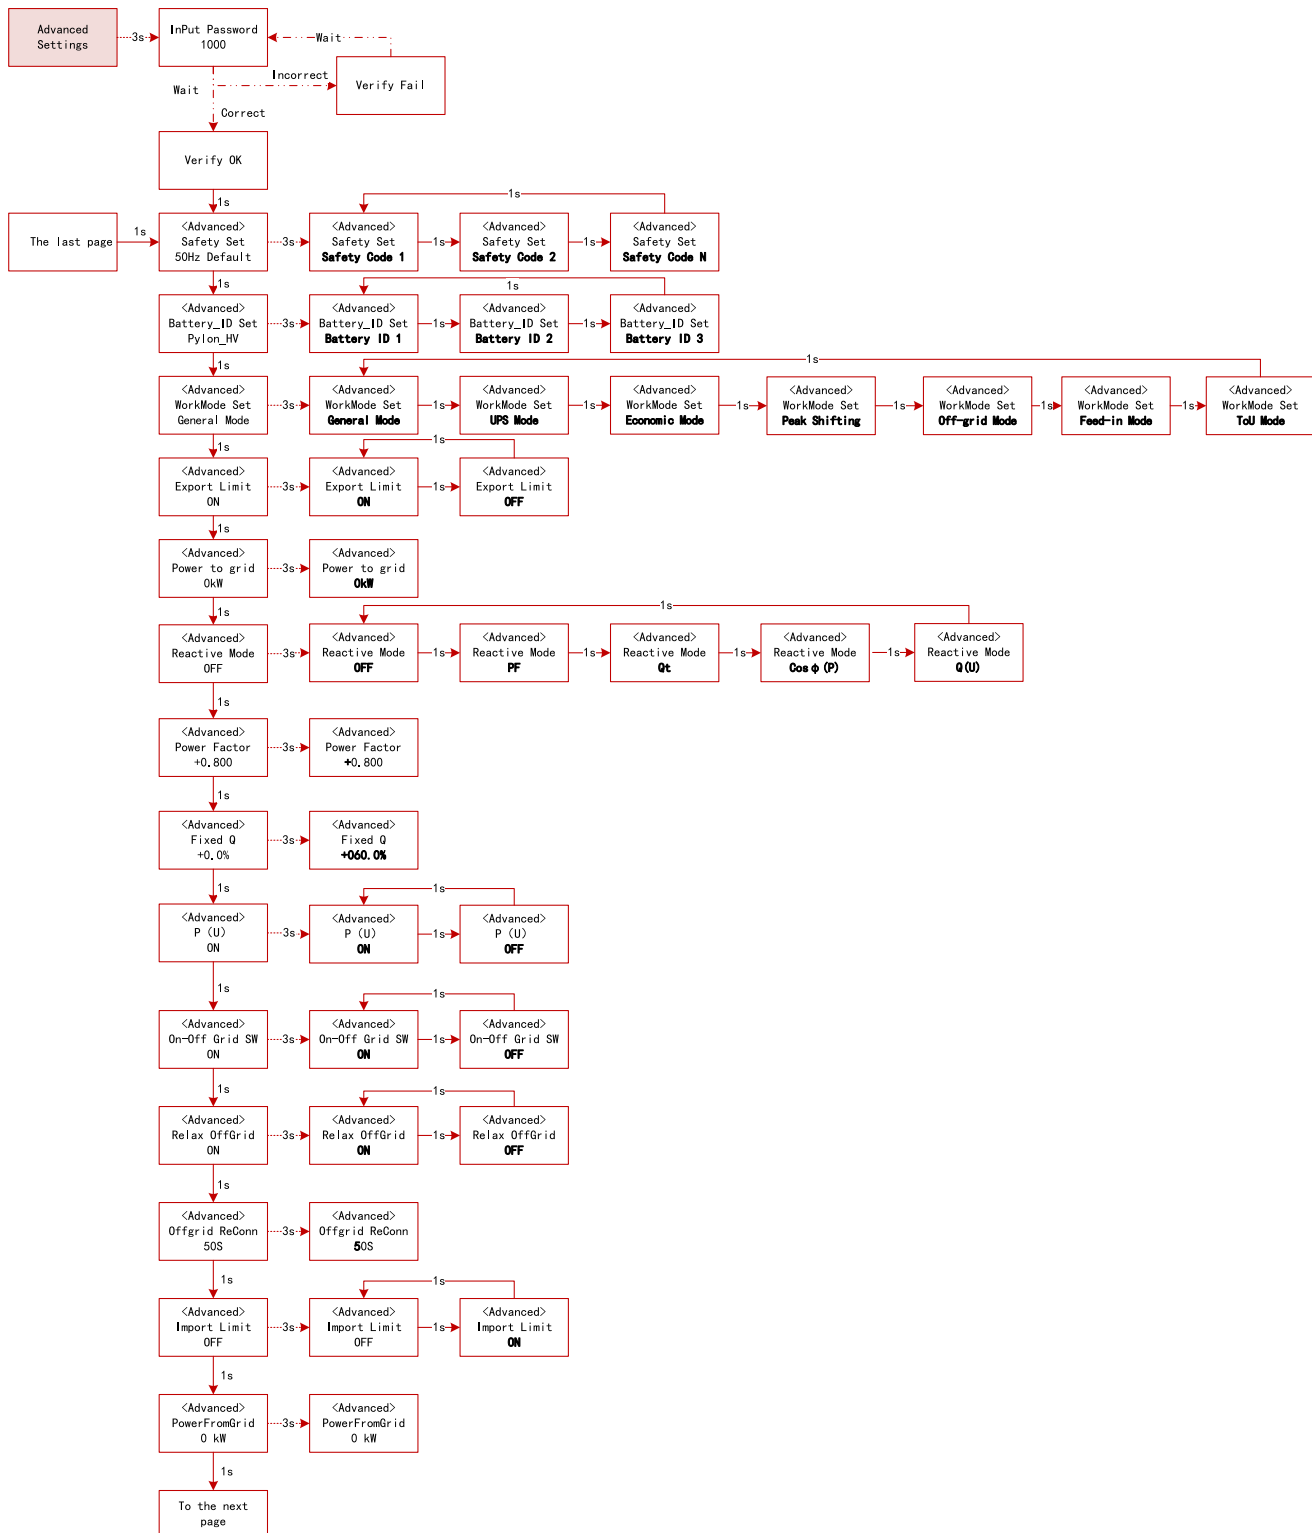

*Please contact BMZ service team for password.

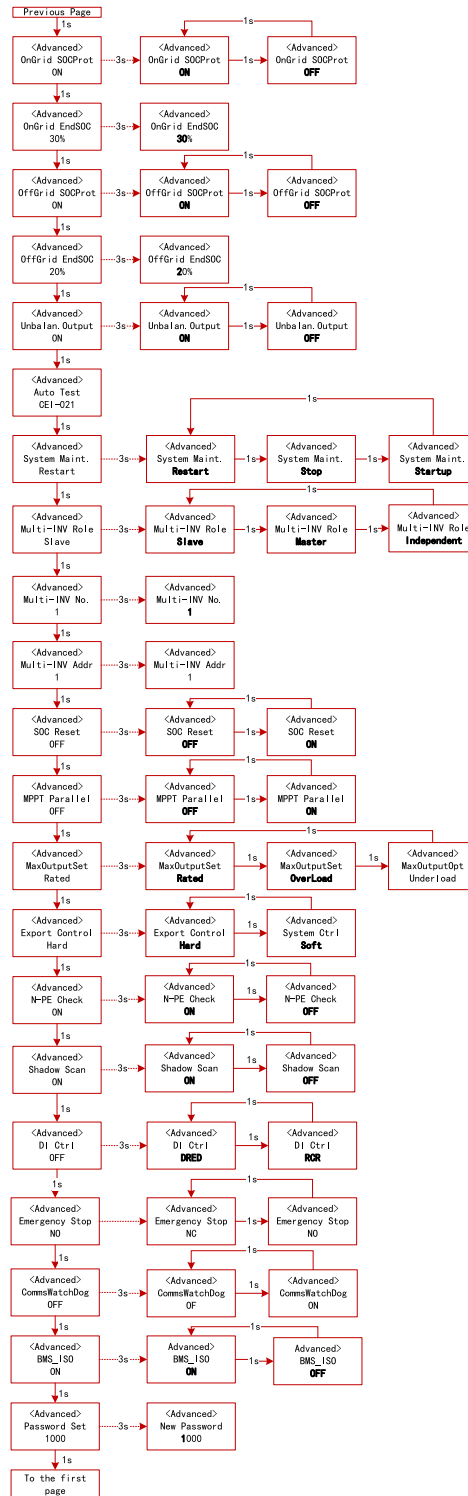


*Please contact BMZ service team for password.

Inverter Display Abbreviation and Complete Name Reference Table:

Abbreviation	Complete Name
Safety Set	Select the code that meet local regulatory requirements
Battery_ID Set	Select the battery model
Work Mode	Current work mode / work mode setting
Export Limit	On-grid export limit function switch

Abbreviation	Complete Name
Power to grid	Set the power that is allowed to feed to the grid (under the condition of Export Limit is on).
Reactive Modes	Reactive Power Mode.
PF	"Under ""Reactive Mode" "The Reactive Power can be regulated by the parameter PF (Power Factor)."
Qt	"Under ""Reactive Mode" "The Reactive Power can be regulated by the parameter Q-Var limits (in %)."
Cosφ(P)	"Under ""Reactive Mode" "The PF changes with the output power of the inverter."
Q(U)	"Under ""Reactive Mode" "The Reactive Power changes with the grid voltage".
Fixed Q	The Reactive Power ratio when the "Reactive Mode" is Qt.
P(U)	Active Power mode Switch. The Active Power changes with the grid voltage.
On-Off Grid SW	Off-grid function switch (If turn it on, the inverter will automatically switch to off-grid mode to ensure the back-up side power supply when the grid is abnormal or off, otherwise, there is no output on the back-up side).
Relax OffGrid	Reduce the switching sensitivity of the On/Off-grid (applied to the places where the grid is unstable or inverter always entered off-grid mode for some reasons).
Offgrid ReConn.	When inverter is operating without grid, it will stop backup output after overload protection, and restart within the set time.
Import Limit	On-grid import limit function switch.
Power From Grid	Set max allowed power from grid (under the condition of Import Limit is on).
OnGrid SocProt.	On-grid battery SOC (State of Charge) Protection.
OnGrid EndSOC	End-of-discharge SOC of on-grid.
OffGrid SocProt.	Off-grid SOC Protection.
OffGrid EndSOC	End-of-discharge SOC of off-grid.
Unbalan. Output	3-Phase Unbalanced Output Switch when inverter work on On-grid state.
System Maint.	System maintenance, includes inverter stop and run, system restart.
Multi-INV Role	In the multi-inverter parallel system, set the role of one inverter as the master and the other inverter as the slave.
*Multi-INV No	This menu is displayed only when the inverter is Master. Set the number of master-slave parallel. Range: 1~10.
**Multi-INV Addr	This menu is displayed only when the inverter is Slave. Set the address of slave inverter. Range: 1~9. The address will be "Auto" when "Multi-INV NO." is "1".
SOC Reset	If turned it on, the battery will be automatically charged to calibrate the battery SOC. After the battery is charged, this function will be turned off automatically.
MPPT Parallel	If MPPT is connected in parallel, enable this function.
MaxOutputSet	Select the maximum AC output power. Rated, Max. output power= Rated output power on the datasheet. Overload, Max. output power= Max. output power on the datasheet. Underload, Max. output power < Rated output power on the datasheet.
Export Control	In the power export limit on mode, when the communication between the inverter and meter or the inverter and datalogger is interrupted, select the inverter operation mode from one of the follows: Hard, inverter stops. Soft, inverter generates power as the "Feed in Grid" value set on the screen.
N-PE Check	The N and PE shorting function on the BACK-UP side in the off-grid operation Status.
Shadow Scan	Shadow Scan function switch.
DI Ctrl	DI Ctrl enable "DRM" or "RCR" function.
DRM	Demand Response Modes.
RCR	Ripple Control Receiver.
Emergency Stop	Emergency stop switch device.
NO	Normally open: Emergency Switch Normally Open, when switch closed, inverter stop.
NC	Normally closed: Emergency Switch Normally Closed, when switch open, inverter stop.
CommsWatchDog	When the function is turned on, the inverter stops working when communication with the master is lost.

7.4 Customize Set

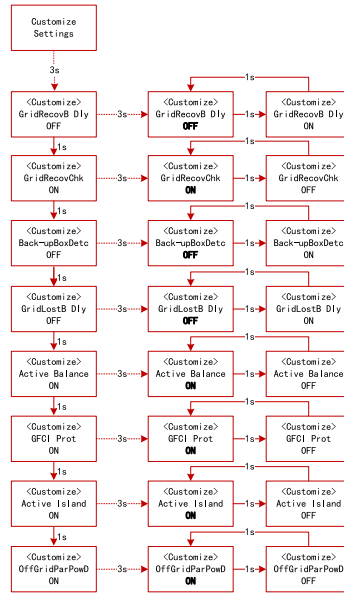

Item	Full name	Description	Application scenarios
GridRecovB Dly	Grid recover back-up output delay function	When the inverter is switched from the off-grid state to the grid-connected state, the back-up side selects normal output or delayed output. OFF(default): Normal output (within 10ms) ON: Delay output (delay 500ms)	When the customer connects to an ATS that cannot self-recover between grid side and back-up side, the customer selects the delay mode and the output is delayed by 500 ms on back-up side, so that the ATS can be switched from back-up side to grid side.
GridRecov Chk	Grid recover self-check function	The inverter is self-test when it is switched from the off-grid state to the grid-connected state. ON(default):Self-test OFF:No self-test Notice:If turn this function off, it may not meet local grid connection regulations	In areas where utility grid is unstable, if utility grid is cut off again during the self-test process, the output on the back-up side will be interrupted.
Back-upBoxDetc	Back-up box detection function	Turn on this function, and the inverter will detect whether the backup box is operating normally OFF(default):Not detected ON:Perform tests Notice:In off-grid parallel system, this function is enabled by default	The function is automatically turned on in off-grid paralleled system. When backup box connected with single inverter, please manually turn on this function.
GridLostB Dly	Grid lost back-up output delay function	When inverter is switched from Grid-connected state and off-grid state, the back-up side is normal output or delayed output. OFF(default): Normal output ON: Delay output	When the system is connected to the shock load, the inverter may not be switched and work normally when grid-connection state switched to off-grid state.and turning on the function can improve the probability of system restart.
Active Balance	Grid active balancing function	When there is no PV and no battery, whether the machine actively turns on the three-phase unbalance function to balance the power of the grid port. ON(default):turn on this function OFF:turn off this function	Turn the function on or off according to the grid requirements and needs
GFCI Prot	GFCI protection function	The leakage current protection function is turned on or off. ON(default):turn on this protection OFF:turn off this protection	When there is abnormal leakage current in the system, which causes the system to fail to operate normally, the function can be disabled. Notice: Before disabling this function, need to confirm that there are no security risks.
Active Island	Active islanding disturbance function	Active islanding disturbance function is turned on or off. ON(default):turn on this function OFF:turn off this function Notice:Active islanding disturbance function is turned off, and the passive islanding protection function is still available.	In some test scenarios, need to disable this function, but no operation is required for normal condition .
OffGridParPowD	Off-grid parallel power distribution function	When multiple inverters are off-grid paralleled, the master schedules and distributes the power of the slaves. ON(default):turn on this function OFF:turn off this function	If the off-grid side of the parallel power station is together, the function needs to be turned on; If the off-grid side of the parallel power station is not combined, the function needs to be turned off

7.6 Reactive Power

The inverter provides a Reactive Power regulation function.

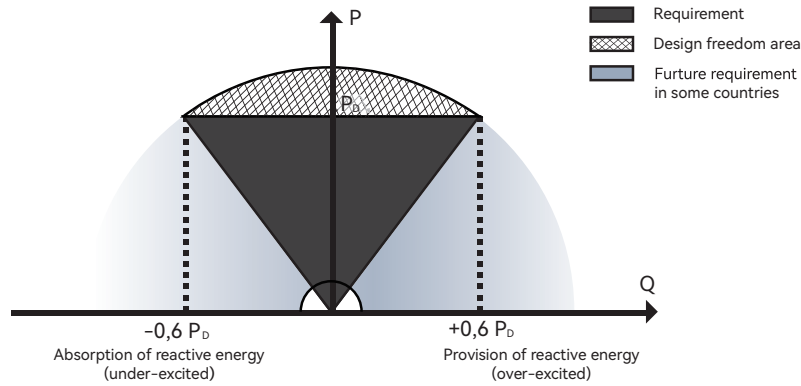


Figure 7-1 Capabilities

This mode can be enabled via configuration software. It is enabled by default in some regions, such as AU, DE market. For information on how to change default setpoints please contact BMZ Technical Support.

Descriptions of Reactive Power regulation mode:

Mode	Descriptions
Off	The PF is fixed at +1.000.
PF	The Reactive Power can be regulated by the parameter PF (Power Factor).
Qt	The Reactive Power can be regulated by the parameter fixed Q(in Pn%).
Cosφ(P)	The PF changes with the output power of the inverter.
Q(U)	The Reactive Power changes with the grid voltage.

▼ 7.6.1 “Off” Modes

The Reactive Power regulation function is disabled. The PF is limited to +1.000.

▼ 7.6.2 “PF” Mode

The power factor is fixed and Reactive Power setpoint is calculated according to the current power. The PF ranges from 0.8 leading to 0.8 lagging.

Leading: the inverter is sourcing Reactive Power to the grid.

Lagging: the inverter is injecting Reactive Power into the grid.

▼ 7.6.3 “Qt” Mode

In the Qt mode, system rated Reactive Power is fixed, and the system injects Reactive Power according to the delivered Reactive Power ratio.

The setting range of the Reactive Power ratio is -60%~60%, corresponding to the ranges of inductive and capacitive Reactive Power regulation respectively.

▼ 7.6.4 “Cosφ(P)” Mode

The PF of the inverter output varies in response to the output power of the inverter.

“Cosφ (P)” Mode Parameter Descriptions:

Parameter	Explanation	Range
Cosφ(P)_P1(Point A)	Output power at P1 on the Cosφ(P) mode curve (in percentage)	10% ~ 100%
Cosφ(P)_P2(Point B)	Output power at P2 on the Cosφ(P) mode curve (in percentage)	20% ~ 100%
Cosφ(P)_P3(Point C)	Output power at P3 on the Cosφ(P) mode curve (in percentage)	20% ~ 100%
Cosφ(P)_K1(Point A)	Power factor at P1 on the Cosφ(P) mode curve	0.8 ~ 1
Cosφ(P)_K2(Point B)	Power factor at P2 on the Cosφ(P) mode curve	
Cosφ(P)_K3(Point C)	Power factor at P3 on the Cosφ(P) mode curve	
Cosφ(P)_Enter-Voltage	Voltage percentage for Cosφ(P) function activation	100% ~ 110%
Cosφ(P)_Exit-Voltage	Voltage percentage for Cosφ(P) function deactivation	90% ~ 100%

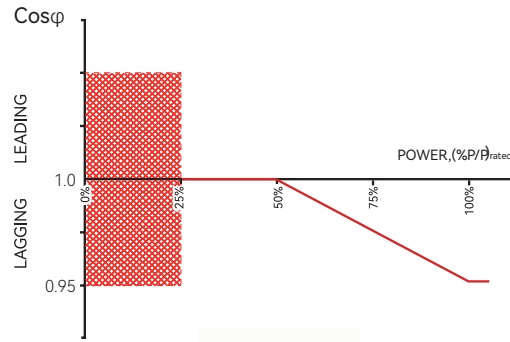


Figure 7-2 Cosφ(P) Curve

▼ 7.6.5 “Q(U)” Mode

The Reactive Power output of the inverter will vary in response to the grid voltage.

“Q(U)” Mode Parameter Descriptions:

Parameter	Explanation	Range
QU_V1	Grid voltage limit at P1 on the Q(U) mode curve	80% ~ 100%
QU_Q1	Value of Q/Sn at P1 on the Q (U) mode curve	0 ~ 60%
QU_V2	Grid voltage limit at P2 on the Q(U) mode curve	80% ~ 100%
QU_Q2	Value of Q/Sn at P2 on the Q (U) mode curve	-60% ~ 60%
QU_V3	Grid voltage limit at P3 on the Q(U) mode curve	100% ~ 120%
QU_Q3	Value of Q/Sn at P3 on the Q (U) mode curve	-60% ~ 60%
QU_V4	Grid voltage limit at P4 on the Q(U) mode curve	100% ~ 120%
QU_Q4	Value of Q/Sn at P4 on the Q(U) mode curve	0 ~ -60%
QU_Enter-Power	Active Power for Q(U) function activation	20% ~ 100%
QU_Exit-Power	Active Power for Q(U) function deactivation	1% ~ 20%

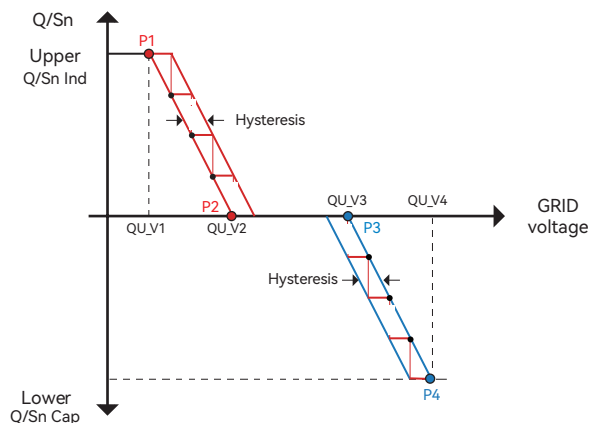



Figure7-3 Q(U) Curve

7.7 Active Power

The Active Power output of the inverter varies in response to the grid voltage. It is enabled by default in some regions, such as AU, EU market. “P(U)” Mode is named “[b] Volt-watt mode” in AS/NZS 4777.2 Chapter 3.3 “Power quality response mode”.


“P(U)” Mode Parameter Descriptions:

Parameter	Explanation	Range
PU_V1	Grid voltage limit at P1 on the P(U) mode curve	100%~120%
PU_P1	Value of P/Sn at P1 on the P (U) mode curve	0~100%
PU_V2	Grid voltage limit at P2 on the P(U) mode curve	100%~120%
PU_P2	Value of P/Sn at P2 on the P (U) mode curve	0~100%
PU(τ)	Time constant of the P(U) mode curve	0~60s

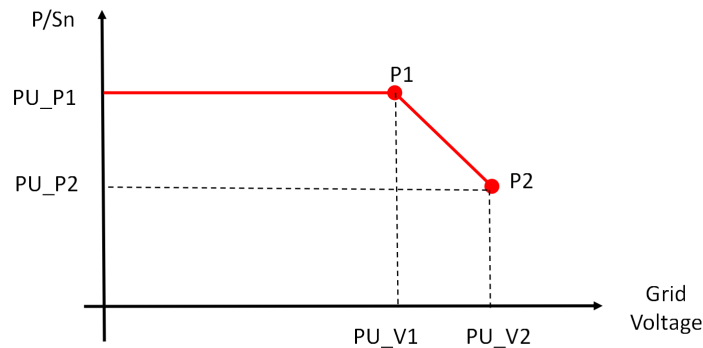

7.8 Check Firmware Version

The flow chart how to Check Firmware Version on OLED display is following.

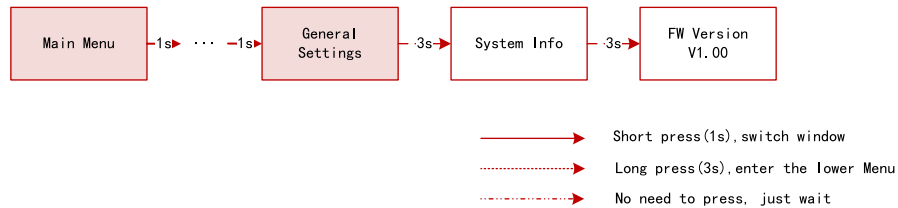



7.9 Grid Parameter

7.9.1 Check Grid Code via OLED Display


The inverter can check grid code (region) for grid protection via OLED display .Please enter the password to select grid code. To obtain the password, please contact BMZ.

The flow chart how to check on the OLED display is following.

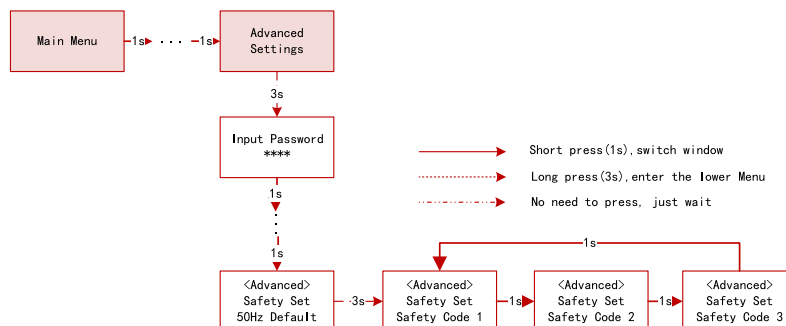

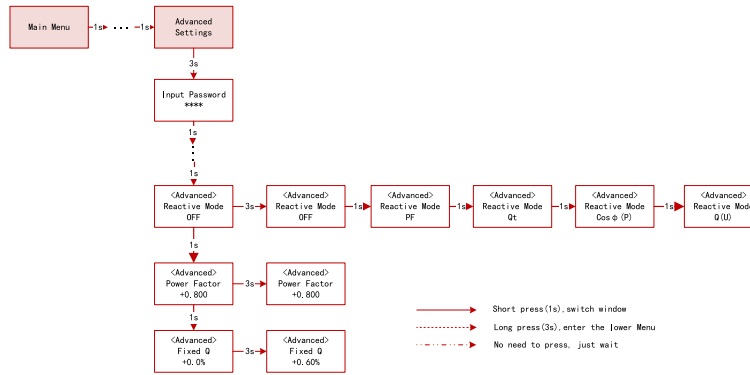


The flow chart how to select Active Mode (including P(U) mode) on OLED display is following.

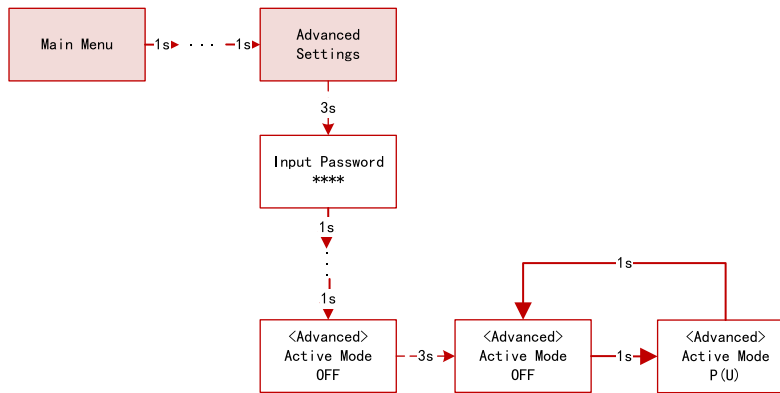


▼ 7.9.5 Check and adjust Grid Code, Reactive and Active Modes setpoints

The inverter can check and adjust grid code, reactive and active modes setpoints via Monitoring platform. The following pictures how to check and adjust on the Monitoring platform is following.


① On the Monitoring interface, click “Device Management” in the “Management” dropdown menu. Click “Parameter Settings” in “Operate” in the column of the device set.

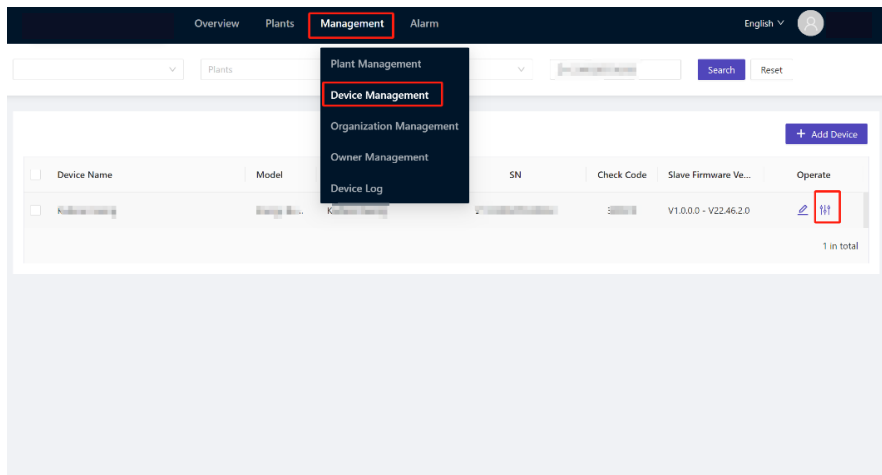


② Click "No, enter the Full configuration".

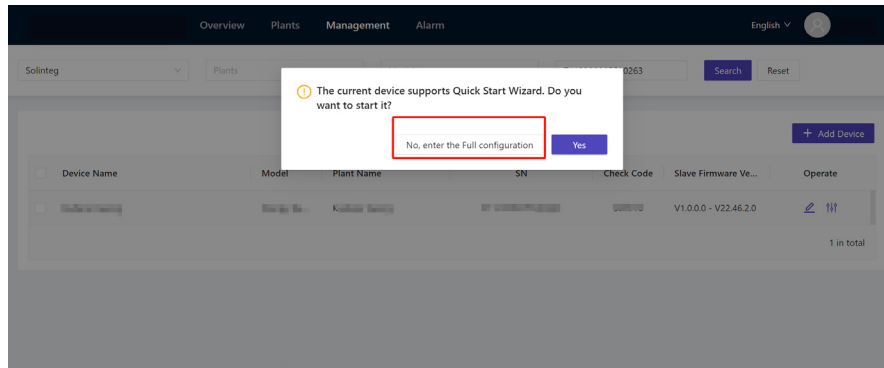


③ Enter "Grid Parameters" menu and check "Safety code settings" (Grid Code).

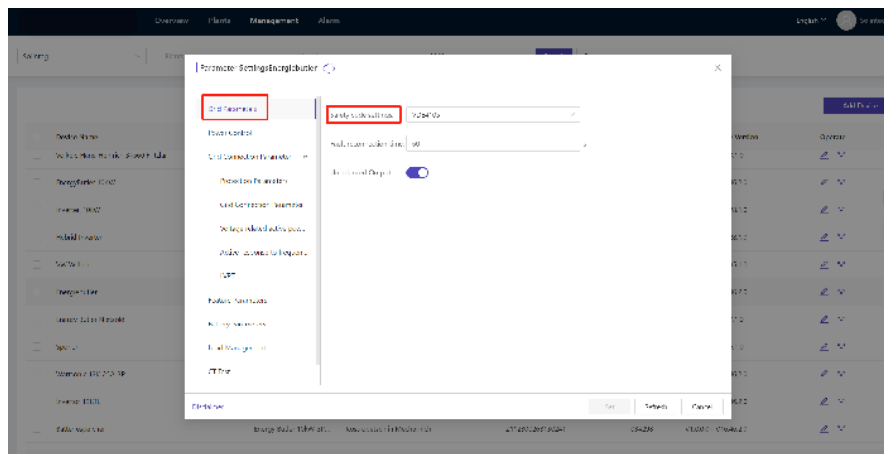


④ Enter "Protection Parameters" and "Grid Connection Parameter" menu under "Grid Connection Parameter" and check grid protection settings setpoints.

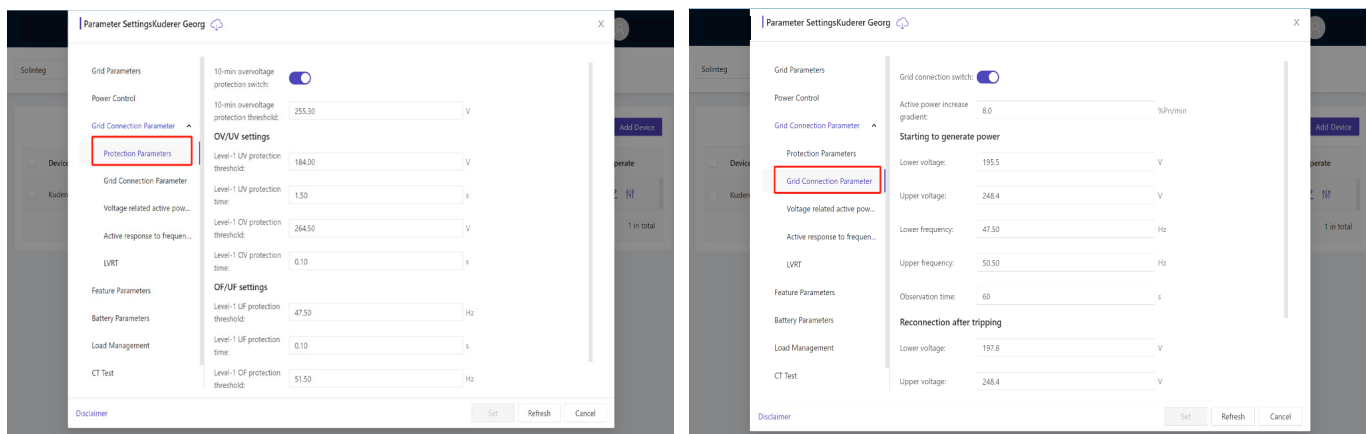


⑤ Enter "Reactive Mode" menu under "Power Control" menu and check reactive mode setpoints.

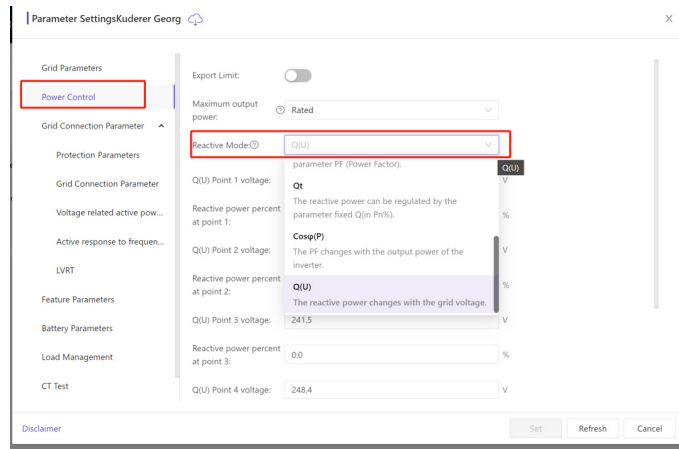

⑥ Enter “Voltage related Active Power P(U)” menu and check active mode setpoints.

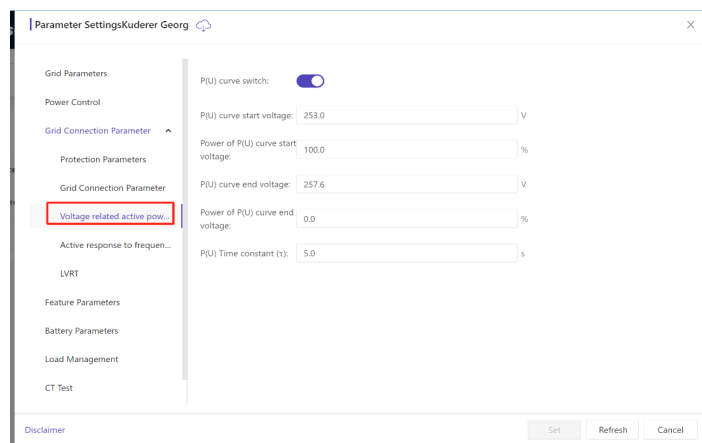

⑦ When the installer or operator need to adjust Grid Code, Protection Parameters setpoints, Grid Connection Parameter setpoints and Reactive and Active Modes setpoints, adjust these parameters setpoint and enter a password after clicking “Set”. And please contact BMZ or installer for password.

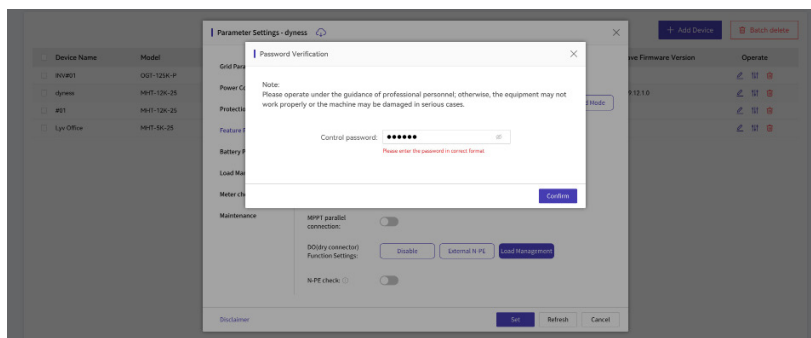

Please enter the password to adjust Grid Code, Protection Parameters setpoints, Grid Connection Parameter setpoints, Reactive Modes and Active Modes setpoints. To obtain the password, please contact BMZ.

Once the Grid Code and setpoints have been set at Commissioning these settings will be locked from editing (unless with Password).


7.10 DI Ctrl

▼ 7.10.1 DRED

DRED function needs to be enabled via the OLED display.

First, set "Export Limit" to "ON" and set "Feed in Grid" to "100%".

Then set "DI Ctrl" to "DRED".

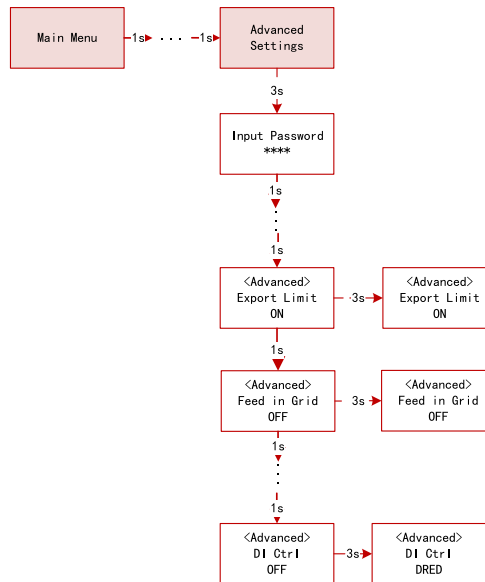


▼ 7.10.2 RCR

RCR function needs to be enabled via the OLED display.

First, set "Export Limit" to "ON" and set "Feed in Grid" to "100%".

Then set "DI Ctrl" to "RCR".

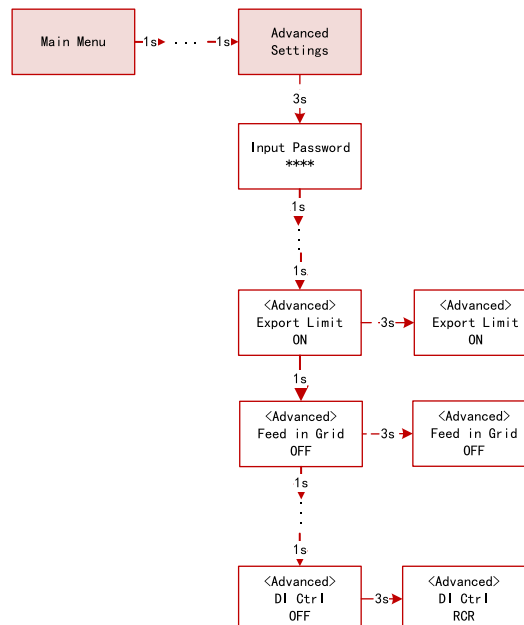

8 Monitoring

8.1 Monitoring Device

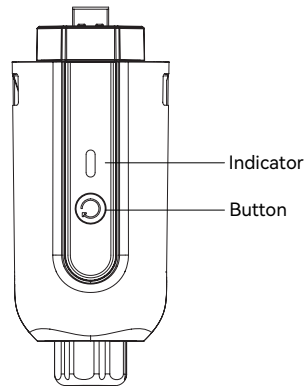




Figure 8-1 Communication Module

Button	Description	
	Press the Button less than 5s : Restart.	
	Press the Button more than 5s: Reset (Delete the previous configuration).	
	OFF	Connection abnormal.
	Slowly flashing	The Communication Module is not connected to the router.
	Quickly flashing	The Communication Module is connected to the router but not connected to the server.
	Always on	The Communication Module is normal working.



The WiFi module needs to be configured to the router for the first Installation. If the router name or password are changed, the WiFi devices will need to be reconfigured. For details, please refer to the [Quick Installation Guide] which is attached to the accessory bag.

If DHCP is enabled on the router, the LAN version module does not need to be configured. Otherwise, please refer to the [Quick Installation Guide] which is attached to the accessory bag.

8.2 Cloud monitoring App

Manufacturer inverter provides a Monitoring port that can collect and transmit data from the inverter to manufacturer Monitoring platform via an external Monitoring Device. Please refer to the product nameplate on side of enclosure to get the Monitoring application. If download issues exist, contact your dealer or manufacturer technical support.

8.3 Local configuration App

Local configuration App is designed for quick configuration of manufacturer hybrid inverters, offering features such as safety code, battery brand and type, work modes, and off-grid application settings through WiFi direct connection, etc.

Please refer to the product nameplate on side of enclosure to get the application. If download issues exist, contact your dealer or manufacturer technical support.

9 Troubleshooting

BMZ POWER2GRID 2504~4020 series hybrid inverter is designed in accordance with grid operation standards, and conform to the requirements of safety and EMC. The inverter had passed a series of rigorous tests to ensure it runs sustainably and reliably before shipment.

9.1 Status Code in Waiting

Code	Description
S01	WorkMode Not Set
S02	Emergency Stop Enable
S03	DC Conditions Unsatisfied
S04	Grid Voltage And Frequency Out Of Allowable Range
S05	Off-grid Switch Not Enabled In Off-grid
S06	No battery In Off-grid
S07	Operation Stopped By Command
S08	SOC Low And PV No Input
S09	Comm. interruption of the slave unit in parallel connection.
S10	Meter comm. interruption under Hard control of export limit.
S11	Waiting for Bypass State
S12	Updating Non-Power-Down Standby State
S13	Diesel Generator Fault
S15	Off-grid Status
S16	Updating Non-Power-Down Flag Clearing
S17	Command Power Limit
S18	Over Frequency Power Limit
S19	Over Temperature Power Limit
S20	Over Current Power Limit
S21	Reactive Power Limit
S22	Feed in Grid Power Limit
S23	Slow Loading
S24	Overvoltage Power Limit
S25	System Power Limit
S26	EMS Command Limitation
S32	PV Power Limited

9.2 Error Message

BMZ POWER2GRID 2504~4020 series hybrid inverter is designed in accordance with grid operation standards, and conform to the requirements of safety and EMC. The inverter had passed a series of rigorous tests to ensure it runs sustainably and reliably before shipment.

When a fault occurs, the corresponding Error Message will be shown on the OLED display, and in this case, the inverter might stop feeding into grid. The fault messages and their corresponding Troubleshooting methods are listed below:

Error Message	Description	Solution
Mains Lost	Grid power outage, AC switch or circuit is disconnected.	<ol style="list-style-type: none"> 1. Check whether the mains supply is lost. 2. Check whether the AC breaker and terminal are well connected.
Grid Voltage Fault	Inverter detects that the grid voltage exceeds the limit of selected safety set range.	<ol style="list-style-type: none"> 1. Check whether the safety code is correct. 2. Check whether the AC cable wiring is correct. 3. Check whether the voltage increased caused by large AC cable impedance. In this case we could replace with a thicker AC cable. 4. Extend the voltage protection limit with the permission of the Electricity Authority.
Grid Frequency Fault	Grid over frequency or underfrequency, the grid frequency is higher or lower than the set protection value.	<ol style="list-style-type: none"> 1. Check whether the AC cable is correct and well connected. 2. Change to another country with wider protection range if it's allowed by the local electricity company.
DCI Fault	Inverter detects that the direct current injection value exceeds the range.	<ol style="list-style-type: none"> 1. Restart the inverter. 2. Seek for help from the installer or manufacture.
ISO Over Limitation	Inverter detects that DC side's insulation impedance to the ground is too low.	<ol style="list-style-type: none"> 1. Check whether PV panels, cables, and connectors are waterlogged or damaged. 2. Use a megger to measure ground resistance on the DC side, and the measured value should not be less than 500 KΩ. 3. Seek help from the installer or manufacture.
GFCI Fault	The inverter detects that the ground leakage current exceeds the limitation.	<ol style="list-style-type: none"> 1. Restart the inverter. 2. Check whether the PV panels, cables, and connectors are waterlogged or damaged. 3. Seek help from the installer or manufacture.
PV Over Voltage	PV input voltage exceeds the upper limit.	Reduce the number of PV panels to make sure that the open-circuit voltage of each string is lower than the inverter maximum allowed input voltage.
Bus Voltage Fault	The voltage of bus circuit is too high	<ol style="list-style-type: none"> 1. Check whether the input voltage exceeds the limit. 2. Restart the inverter. 3. Seek help from the installer or manufacture.
Inverter Over Temperature	The inverter detects its high internal temperature	<ol style="list-style-type: none"> 1. Check whether the inverter installation location is well ventilated. 2. Try to turn it off for a while, and then power it back on when it cools down. 3. Seek help from the installer or manufacture.
N-PE Check Fault	The ground cable is loose or in poor connection	Check whether the ground cable wiring is correct.
SPI Fault	Internal communication got failed. Caused by a strong external magnetic field etc.	<ol style="list-style-type: none"> 1. Restart the inverter. 2. Seek help from the installer or manufacture.
E2 Fault	Internal storage got abnormal. Caused by a strong external magnetic field etc.	<ol style="list-style-type: none"> 1. Restart the inverter. 2. Seek help from the installer or manufacture.
GFCI Device Fault	GFCI device got abnormal	<ol style="list-style-type: none"> 1. Restart the inverter. 2. Seek for help from the installer or manufacture.
AC Transducer Fault	AC transducer got abnormal	<ol style="list-style-type: none"> 1. Restart the inverter. 2. Seek for help from the installer or manufacture.

Error Message	Description	Solution
Relay Check Fail	Self-checking of internal relay got failed. Neutral & ground cable are in poor connection on AC side.	<ol style="list-style-type: none"> 1. Use multimeter to measure the voltage between N&PE cable on AC side. If the voltage is higher than 10V, which means the neutral or ground connection is abnormal. 2. restart the inverter. 3. Seek help from the installer or manufacture.
Internal Fan Fault	Inverter's internal fan got failed	<ol style="list-style-type: none"> 1. Restart the inverter. 2. Seek for help from the installer or manufacture.
External Fan Fault	Inverter's external fan got failed	<ol style="list-style-type: none"> 1. Check whether the fan is blocked by foreign matters, clean them if necessary.
Bat OV	Battery protection got triggered	<ol style="list-style-type: none"> 1. Check working Status of battery. 2. Check if battery is alarming.
Backup OV	Abnormal voltage exists on the back-up side	Turn off inverter and remove the back-up connector. Use a multimeter to measure whether there is voltage existing on the back-up connector.
Bus Volt Low	Abnormal power schedduling	Check whether the battery voltage or PV input voltage is normal.
Hard Fault	Hardware protection got triggered	<ol style="list-style-type: none"> 1. Restart the inverter. 2. Seek help from the installer or manufacture.
Backup OP	Output power over limitation on back-up side	Check whether the load power on back-up side exceeds the maximum output power of inverter.
Inverter OV	The load power exceeds the range of its limit of inverter in off-gird mode	<ol style="list-style-type: none"> 1. Check whether there is an impact load on the back-up side and whether the load power is too high. 2. Check whether back-up side is short circuit.
Inverter OF	The load power exceeds the range of its limit of inverter in off-gird mode	<ol style="list-style-type: none"> 1. Check whether there is an impact load on the back-up side and whether the load power is too high. 2. Check whether back-up side is short circuit.
Inverter OC	The load power exceeds the range of its limit of inverter in off-gird mode	<ol style="list-style-type: none"> 1. Check whether there is an impact load on the back-up side and whether the load power is too high. 2. Check whether back-up side is short circuit.
SCI Fault	Internal communication got failed. Caused by a strong external magnetic field etc.	<ol style="list-style-type: none"> 1. Restart the inverter. 2. Seek for help from the installer or manufacture.
FLASH Fault	Internal storage anomaly. Caused by a strong external magnetic field etc.	<ol style="list-style-type: none"> 1. Restart the inverter. 2. Seek for help from the installer or manufacture.
Meter Comm Fault	Abnormal communication between meter and inverter.	<ol style="list-style-type: none"> 1. Check whether the Communication Connection between inverter and meter is reliable. 2. Comfirm whether the meter model is compatible.
BMS Comm Fault	Abnormal communication between inverter and battery BMS.	<ol style="list-style-type: none"> 1. Check whether the battery ID selection is correct. 2. Check whether the Communication Connection between inverter and BMS is reliable. 3. Check the working Status of battery.

9.3 Inverter Maintenance



Incorrect operation do cause the risk of inverter damage or personal injury.

Please strictly follow the steps below.

- ① select 'stop' option on inverter screen or Monitoring app to shut down inverter.
- ② Turn off the AC breaker on utility grid side.
- ③ Turn off inverter DC switch.
- ④ Turn off the battery switch, and disconnect the DC breaker on the battery side (if any).
- ⑤ Wait for 10 minutes to ensure the energy of capacitor is fully dissipated.
- ⑥ Confirm all the Indicator lights are off.



Keep unprofessional person away.
A temporary alarm sign or barrier must be posted to keep unprofessional person away while performing Electrical Connection and maintenance.



Any Arbitrary replacement of internal components is forbidden.
Please seek help from BMZ for maintenance support. Otherwise, we will not take any responsibility.



Please remember not to do the self-maintenance before being familiar with the proper instruction of the whole process.

Items	Methods	Period
System clean	Check dust or foreign matter on the heat-sink, air inlet and outlet.	Once 6-12 months
Electrical Connection	Check whether the cables are in good connection.	Once 6-12 months
Sealing	Check whether all the terminals and ports are properly sealed. Reseal the cable hole if it is aging or not sealed.	Once a year

9.4 Battery Maintenance

Installation and maintenance of batteries should be performed or supervised with professional knowledge about batteries. Please contact your battery supplier for detailed Installation and maintenance information.



Keep unprofessional person away.
A temporary alarm sign or barrier must be posted to keep unprofessional person away while performing Electrical Connection and maintenance.



The battery has risk of electrical shock, the following scenario should be noticed during the operation.

- Remove metal items from your body.
- Use insulated tools.
- Remove metal items from battery.
- Turn off the DC breaker of the battery before assembling or disassembling battery terminals.
- There is a risk of electrical shock if battery is unexpectedly grounded. Remove the grounding cable to avoid the electrical shock.

9.5 Earth Fault Alarm

When the PV array occur earth fault, the inverter will report the following alarm information. The alarm system shall continue until the earth fault is corrected.

- The warning Indicator shows red constantly, and the OLED display will display "ISO Over Limitation" or "GFCI Fault".
- The Monitoring platform and APP will show warning messages. Users can set up to receive alarm information via E-Mail.



Please ensure the inverter is installed in a high traffic area where the visual alarm(warning Indicator) will be noticed.

10 Appendix

10.1 Technical Parameters

Model	POWER2GRID 2504	POWER2GRID 2505	POWER2GRID 2506	POWER2GRID 2508
PV Input				
Start-up voltage (V)	135	135	135	135
Max. DC input voltage (V)*	1000*	1000*	1000*	1000*
Rated DC input voltage (V)	620	620	620	620
MPPT voltage range (V)*	120-950*	120-950*	120-950*	200-950*
Minimum operating DC voltage (V)	120	120	200	120
No. of MPP trackers	2	2	2	2
No. of DC inputs per MPPT	1/1	1/1	1/1	1/1
Max. input current (A)	15/15	15/15	15/15	15/15
Max. short-circuit current (A)	20/20	20/20	20/20	20/20
Backfeed current to the array (A)	0	0	0	0
Battery Side				
Battery type	Lithium Battery (with BMS)			
Battery communication mode	CAN	CAN	CAN	CAN
Battery voltage range (V)	135-750	135-750	135-750	135-750
Maximum charging current (A)	25	25	25	25
Maximum discharge current (A)	25	25	25	25
Short circuit current rating for the Battery input*** (A)	63	63	63	63
Grid Side				
Rated output power (kW)	4.0	5.0	6.0	8.0
Max. output power (kW)	4.4	5.5	6.6	8.8
Rated output apparent power (kVA)	4.0	5.0	6.0	8.0
Max. output apparent power (kVA)	4.4	5.5	6.6	8.8
Max. input apparent power (kVA)	8.0	10.0	12.0	16.0
Max. charging power of battery (kW)	4.0	5.0	6.0	8.0
Rated AC voltage (V)	3L/N/PE, 220/380V; 230/400V; 240/415V			
Rated AC frequency (Hz)	50/60	50/60	50/60	50/60
Rated output current (A)	5.8	7.3	8.7	11.6
Max. output current (A)	6.7	8.3	10.0	13.3
Max. input current (A)	11.6	14.5	17.4	23.2
The measured inrush current(A)	15.8@54us	15.8@54us	15.8@54us	15.8@54us
Max.output fault current(A)	46.6	46.6	46.6	59.4
Max. output overcurrent protection (A)	46.6	46.6	46.6	59.4
Power factor	0.8 leading ...0.8 lagging			
Max. total harmonic distortion	<3% @Rated output power			
DCI	<0.5%In	<0.5%In	<0.5%In	<0.5%In
Back-up Side				
Rated output power (kW)	4.0	5.0	6.0	8.0
Max. output power (kW)	4.4	5.5	6.6	8.8
Rated output apparent power (kVA)	4.0	5.0	6.0	8.0
Max. output apparent power (kVA)	4.4	5.5	6.6	8.8

Model	POWER2GRID 2504	POWER2GRID 2505	POWER2GRID 2506	POWER2GRID 2508
Back-up Side				
Rated output current (A)	5.8	7.3	8.7	11.6
Max. output current (A)	6.7	8.3	10.0	13.3
UPS switching time	<10ms	<10ms	<10ms	<10ms
Rated output voltage (V)	3/N/PE, 220/380V; 230/400V; 240/415V			
Rated output frequency (Hz)	50/60	50/60	50/60	50/60
Peak output apparent power (kVA)	6, 60s	7.5, 60s	9, 60s	12, 60s
Voltage harmonic distortion	<3% @Linear load			
Efficiency				
Max. efficiency	98.1%	98.1%	98.1%	98.2%
European efficiency	97.3%	97.3%	97.3%	97.4%
Protection				
DC reverse polarity protection	Integrated			
Battery input reverse connection protection	Integrated			
Insulation resistance protection	Integrated			
Surge protection	Integrated			
Over-temperature protection	Integrated			
Residual current protection	Integrated			
Islanding protection	Integrated (Frequency shift)			
AC over-voltage protection	Integrated			
Overload protection	Integrated			
AC short-circuit protection	Integrated			
General Data				
Over voltage category	PV: II ; Main: III			
Dimensions (mm)	534*418*210 (W*H*D)			
Weight (KG)	26	26	26	26
Protection degree	IP65	IP65	IP65	IP65
Standby self-consumption (W)	<15	<15	<15	<15
Topology	Transformerless			
Operating Temperature Range (°C)	-30~60	-30~60	-30~60	-30~60
Relative Humidity (%)	0~100	0~100	0~100	0~100
Operating Altitude (m)	3000 (>3000m derating)			
Cooling	Natural Convection			
Noise Level (dB)	<25	<25	<25	<25
Display	OLED & LED			
Communication	CAN, RS485, WiFi/LAN (Optional)			

Model	POWER2GRID 2510	POWER2GRID 2512	POWER2GRID 4010	POWER2GRID 4012
PV Input				
Start-up voltage (V)	135	135	135	135
Max. DC input voltage (V)*	1000*	1000*	1000*	1000*
Rated DC input voltage (V)	620	620	620	620
MPPT voltage range (V)*	200-950*	200-950*	200-950*	200-950*
Minimum operating DC voltage (V)	200	120	200	120
No. of MPP trackers	2	2	2	2
No. of DC inputs per MPPT	1/1	1/1	2/2	2/2
Max. input current (A)	15/15	15/15	30/30	30/30
Max. short-circuit current (A)	20/20	20/20	40/40	40/40
Backfeed current to the array (A)	0	0	0	0
Battery Side				
Battery type	Lithium Battery (with BMS)			
Battery communication mode	CAN	CAN	CAN	CAN
Battery voltage range (V)	135-750	135-750	135-750	135-750
Maximum charging current (A)	25	25	40	40
Maximum discharge current (A)	25	25	40	40
Short circuit current rating for the Battery input*** (A)	63	63	100	100
Grid Side				
Rated output power (kW)	10.0	12.0	10.0	12.0
Max. output power (kW)	11.0 ^①	13.2	11.0 ^①	13.2
Rated output apparent power (kVA)	10.0	12.0	10.0	12.0
Max. output apparent power (kVA)	11.0 ^②	13.2	11.0 ^②	13.2
Max. input apparent power (kVA)	16.5	16.5	20.0	24.0
Max. charging power of battery (kW)	10.0	12.0	10.0	12.0
Rated AC voltage (V)	3L/N/PE, 220/380V; 230/400V; 240/415V			
Rated AC frequency (Hz)	50/60	50/60	50/60	50/60
Rated output current (A)	14.5	17.4	14.5	17.4
Max. output current (A)	16.5 ^③	20.0	16.5 ^③	20.0
Max. input current (A)	23.9	23.9	29.0	34.8
The measured inrush current(A)	15.8@54us	15.8@54us	5.6@17us	5.6@17us
Max.output fault current(A)	59.4	59.4	59.4	59.4
Max. output overcurrent protection (A)	59.4	59.4	59.4	59.4
Power factor	0.8 leading ...0.8 lagging			
Max. total harmonic distortion	<3% @Rated output power			
DCI	<0.5%In	<0.5%In	<0.5%In	<0.5%In
Back-up Side				
Rated output power (kW)	10.0	12.0	10.0	12.0
Max. output power (kW)	11.0	13.2	11.0	13.2
Rated output apparent power (kVA)	10.0	12.0	10.0	12.0
Max. output apparent power (kVA)	11.0	13.2	11.0	13.2
Rated output current (A)	14.5	17.4	14.5	17.4
Max. output current (A)	16.5	20.0	16.5	20.0
UPS switching time	<10ms	<10ms	<10ms	<10ms
Rated output voltage (V)	3/N/PE, 220/380V; 230/400V; 240/415V			
Rated output frequency (Hz)	50/60	50/60	50/60	50/60

Model	POWER2GRID 2510	POWER2GRID 2512	POWER2GRID 4010	POWER2GRID 4012
Back-up Side				
Peak output apparent power (kVA)	15, 60s	18, 60s	15, 60s	18, 60s
Voltage harmonic distortion	<3% @Linear load			
Efficiency				
Max. efficiency	98.2%	98.2%	98.4%	98.4%
European efficiency	97.4%	97.4%	97.5%	97.5%
Protection				
DC reverse polarity protection	Integrated			
Battery input reverse connection protection	Integrated			
Insulation resistance protection	Integrated			
Surge protection	Integrated			
Over-temperature protection	Integrated			
Residual current protection	Integrated			
Islanding protection	Integrated (Frequency shift)			
AC over-voltage protection	Integrated			
Overload protection	Integrated			
AC short-circuit protection	Integrated			
General Data				
Over voltage category	PV: II ; Main: III			
Dimensions (mm)	534*418*210 (W*H*D)			
Weight (KG)	26	26	26	26
Protection degree	IP65	IP65	IP65	IP65
Standby self-consumption (W)	<15	<15	<15	<15
Topology	Transformerless			
Operating Temperature Range (°C)	-30~60	-30~60	-30~60	-30~60
Relative Humidity (%)	0~100	0~100	0~100	0~100
Operating Altitude (m)	3000 (>3000m derating)			
Cooling	Natural Convection		Smart fan	
Noise Level (dB)	<25	<25	<25	<25
Display	OLED & LED			
Communication	CAN, RS485, WiFi/LAN (Optional)			

Model	POWER2GRID 4015	POWER2GRID 4020
PV Input		
Start-up voltage (V)	135	135
Max. DC input voltage (V)*	1000*	1000*
Rated DC input voltage (V)	620	620
MPPT voltage range (V)*	200-950*	200-950*
Minimum operating DC voltage (V)	200	120
No. of MPP trackers	2	2
No. of DC inputs per MPPT	2/2	2/2
Max. input current (A)	30/30	30/30
Max. short-circuit current (A)	40/40	40/40
Backfeed current to the array (A)	0	0
Battery Side		
Battery type	Lithium Battery (with BMS)	
Battery communication mode	CAN	CAN
Battery voltage range (V)	135-750	135-750
Maximum charging current (A)	40	40
Maximum discharge current (A)	40	40
Short circuit current rating for the Battery input*** (A)	100	100
Grid Side		
Rated output power (kW)	15.0	20.0
Max. output power (kW)	16.5 **	22.0
Rated output apparent power (kVA)	15.0	20.0
Max. output apparent power (kVA)	16.5 **	22.0
Max. input apparent power (kVA)	30.0	30.0
Max. charging power of battery (kW)	15.0	20.0
Rated AC voltage (V)	3L/N/PE, 220/380V; 230/400V; 240/415V	
Rated AC frequency (Hz)	50/60	50/60
Rated output current (A)	21.7	29.0
Max. output current (A)	25.0 **	33.5
Max. input current (A)	43.5	43.5
The measured inrush current(A)	14.4@70us	14.4@70us
Max.output fault current(A)	68.4	68.4
Max. output overcurrent protection (A)	68.4	68.4
Power factor	0.8 leading ...0.8 lagging	
Max. total harmonic distortion	<3% @Rated output power	
DCI	<0.5%In	<0.5%In
Back-up Side		
Rated output power (kW)	15.0	20.0
Max. output power (kW)	16.5	22.0
Rated output apparent power (kVA)	15.0	20.0
Max. output apparent power (kVA)	16.5	22.0
Rated output current (A)	21.7	29.0
Max. output current (A)	25.0	33.5
UPS switching time	<10ms	<10ms
Rated output voltage (V)	3/N/PE, 220/380V; 230/400V; 240/415V	
Rated output frequency (Hz)	50/60	50/60
Peak output apparent power (kVA)	22.5, 60s	30, 60s

Model	POWER2GRID 4015		POWER2GRID 4020	
Back-up Side				
Voltage harmonic distortion	<3% @Linear load			
Efficiency				
Max. efficiency	98.4%		98.4%	
European efficiency	97.5%		97.5%	
Protection				
DC reverse polarity protection	Integrated			
Battery input reverse connection protection	Integrated			
Insulation resistance protection	Integrated			
Surge protection	Integrated			
Over-temperature protection	Integrated			
Residual current protection	Integrated			
Islanding protection	Integrated (Frequency shift)			
AC over-voltage protection	Integrated			
Overload protection	Integrated			
AC short-circuit protection	Integrated			
General Data				
Over voltage category	PV: II ; Main: III			
Dimensions (mm)	534*418*210 (W*H*D)			
Weight (KG)	31		31	
Protection degree	IP65		IP65	
Standby self-consumption (W)	<15		<15	
Topology	Transformerless			
Operating Temperature Range (°C)	-30~60		-30~60	
Relative Humidity (%)	0~100		0~100	
Operating Altitude (m)	3000 (>3000m derating)			
Cooling	Smart fan			
Noise Level (dB)	<40		<40	
Display	OLED & LED			
Communication	CAN, RS485, WiFi/LAN (Optional)			

1) G98: 10.5kW

2) G98: 10.5kVA

3) G98: 16.00A

* PV Max. DC Input voltage and MPPT Max. voltage is 950V without battery, or 850V with battery. The inverter will stop working when voltage between 950V(without battery)/850V(with battery) to 1000V. The inverter will cause damage when voltage higher than 1000V.

** In some countries and areas, Max. Power of inverter "POWER2GRID 4015" can not exceed 15 kW or kVA via setting the "Underload" mode.

*** Rated current of built-in Fuse.

**** Max .input current of each string of PV should not exceed 20A; Max.input current of each MPPT should not exceed 40A.

10.2 Contact Information

Should you have any question about this product, please contact us.

We need the following information to provide you the best assistance:

- Model of the device
- Serial number of the device
- Date of the device
- Fault code/name
- Brief Description of the problem